




The Boxer Storage Bed

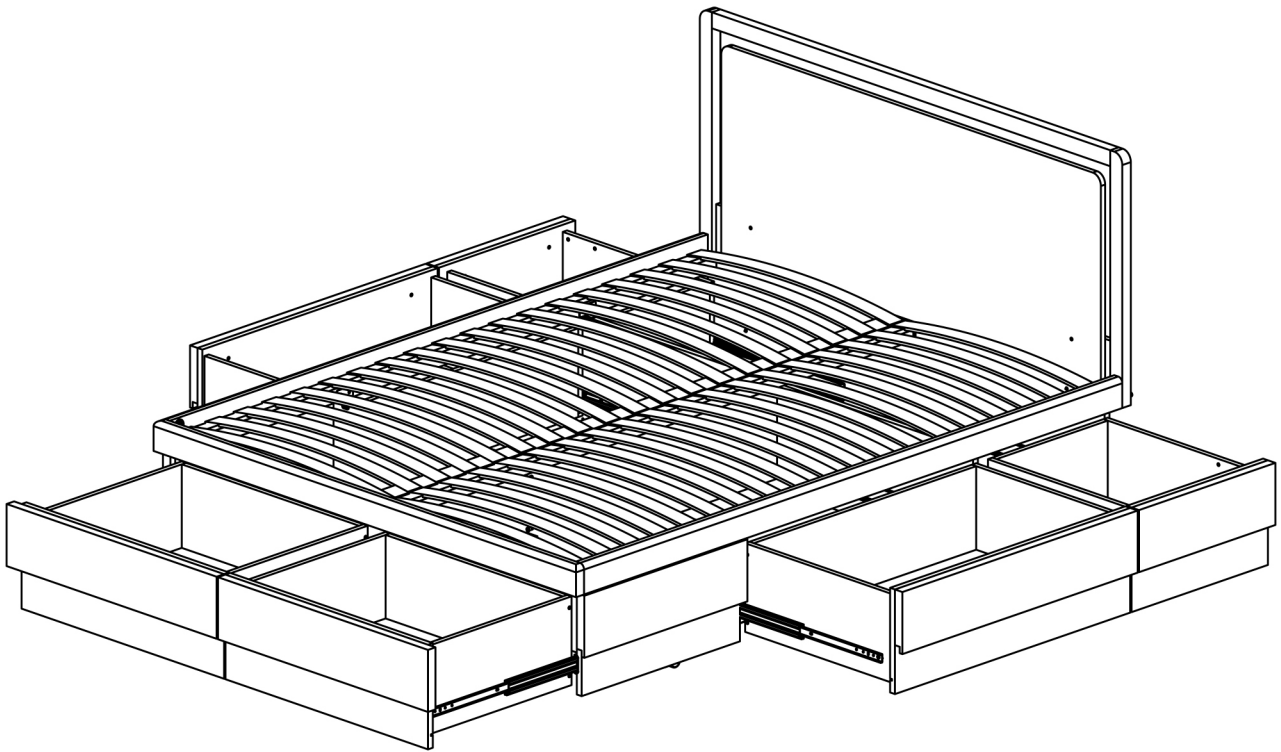


You will need the following tools:

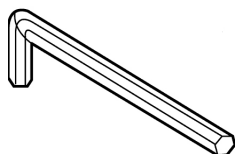


4mm A/F allen key

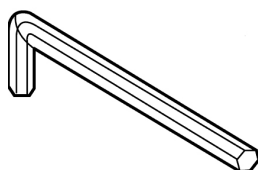

6mm A/F allen key

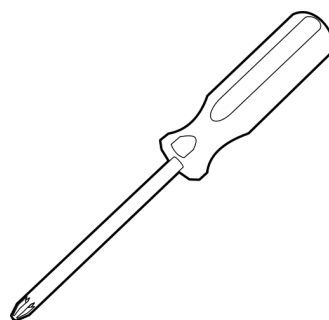


Pozi screwdriver

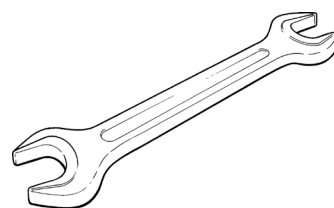

19mm A/F spanner
(if fitting castors)


Box contents:

Box 1 -

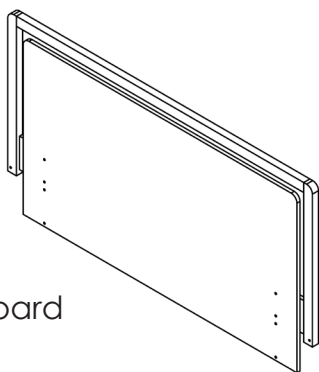


Headboard

Box 2 -

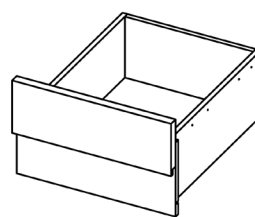


x2, Left & Right Hand

N.B Drawers require
self - assembly

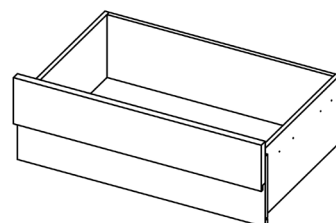


Box 3 -


x2 Side Rails

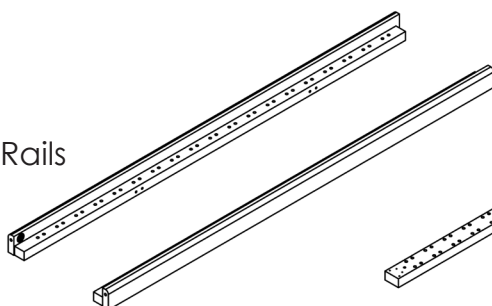


Centre Rail

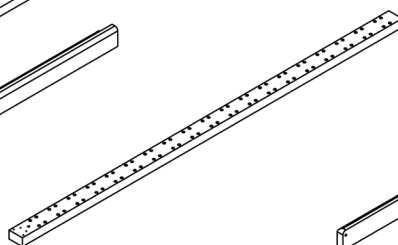


End Rail

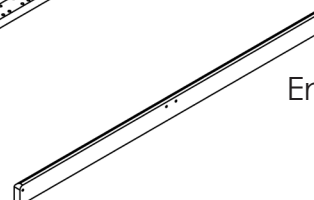


Head End Cross
Panel

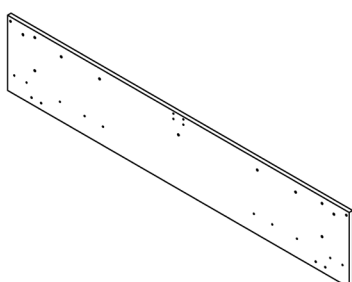


Mid Cross Panel

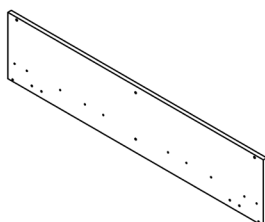

Centre Connecting
Panel

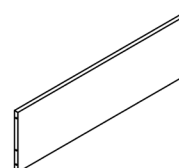

Box 4 -

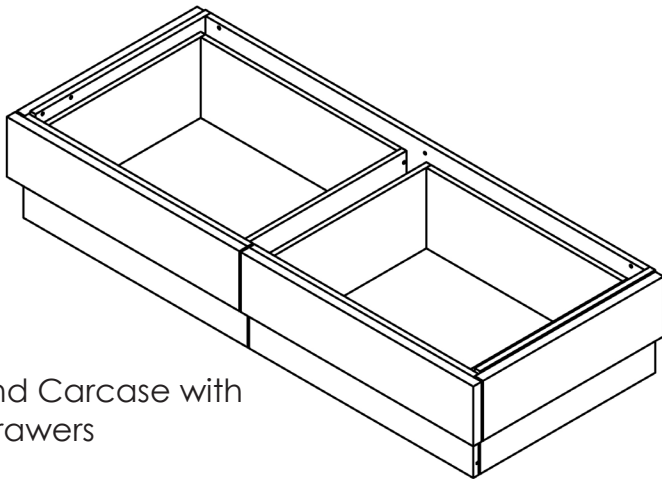


End Carcase with
Drawers



x4 pairs of drawer runners
and all assembly fittings


Box 5 -

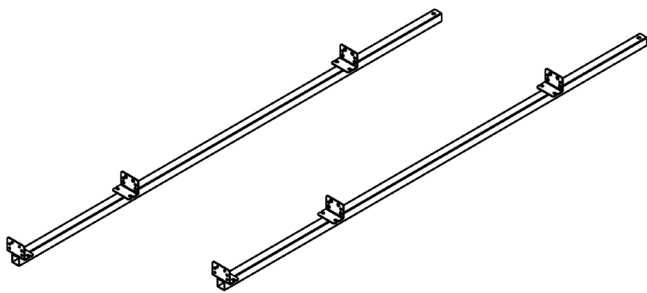


x2 Metal Underframe

Box 6 -


x36 slats on Double bed
(W135)
x38 slats on King (W150) &
Super King (W180) beds

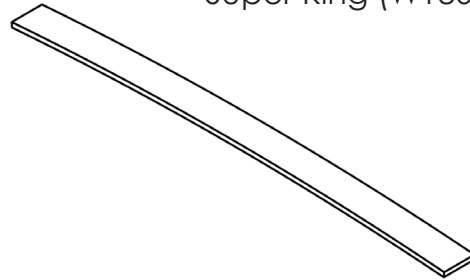

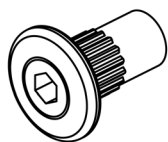

x16

(+2 if fitting castors)
M6 sleeve nut

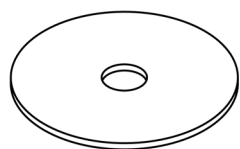

x4

(if fitting castors)
6 x dia 30 washer




x24

Eurocrew 6.3 dia x
11



x30

(+2 if fitting castors)
M6 x 16 screw

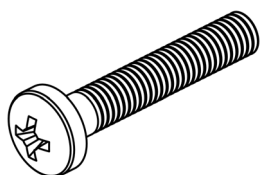

x2

M6 x 35 screw




x20

Eurocrew 6.3 dia x 8




x15

Woodscrew 3.5 dia
x 20

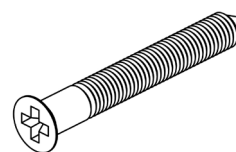

x6

Eurocrew dia 7 x 50

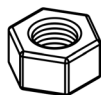


x2

(if fitting castors)
M12 nut




x2

(if fitting castors)
6 x dia 10 washer

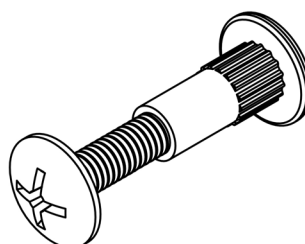


x4

Connecting bolt

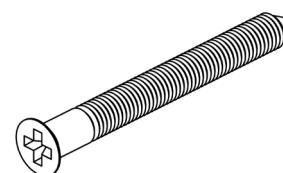


x2

Eurocrew dia 7 x 70

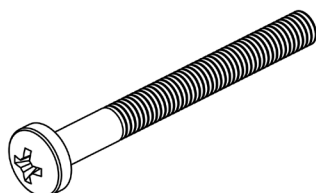


x1

M6 x 60 screw

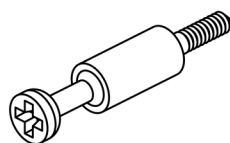


x2

Screw in dowel

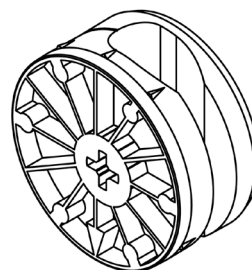


x2


Cam lock dia 35mm

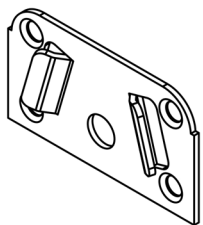

x1

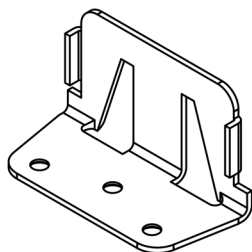


x1

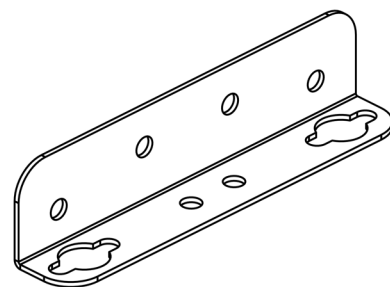


x2




x1

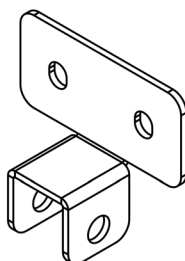


x4

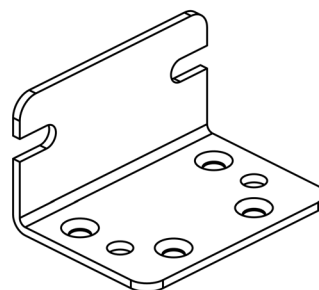


x1

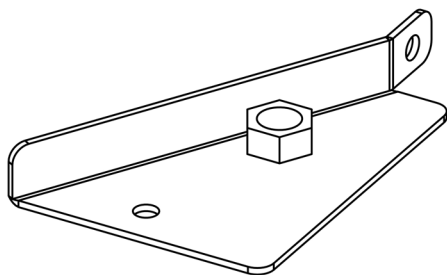

x2
(if fitting castors)

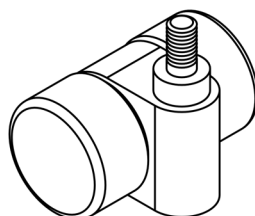


x4
(if fitting castors)

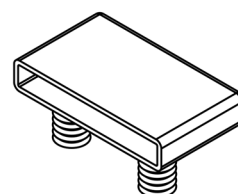


x36/38
(depending on bed size)


1

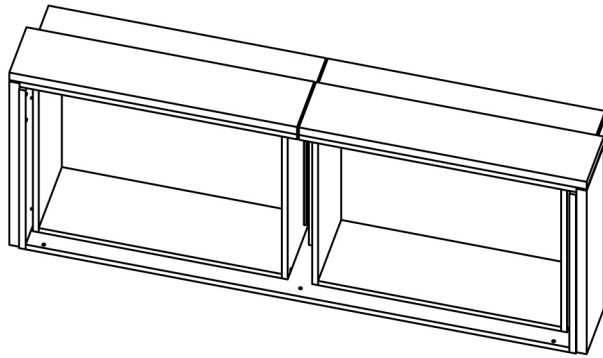


2

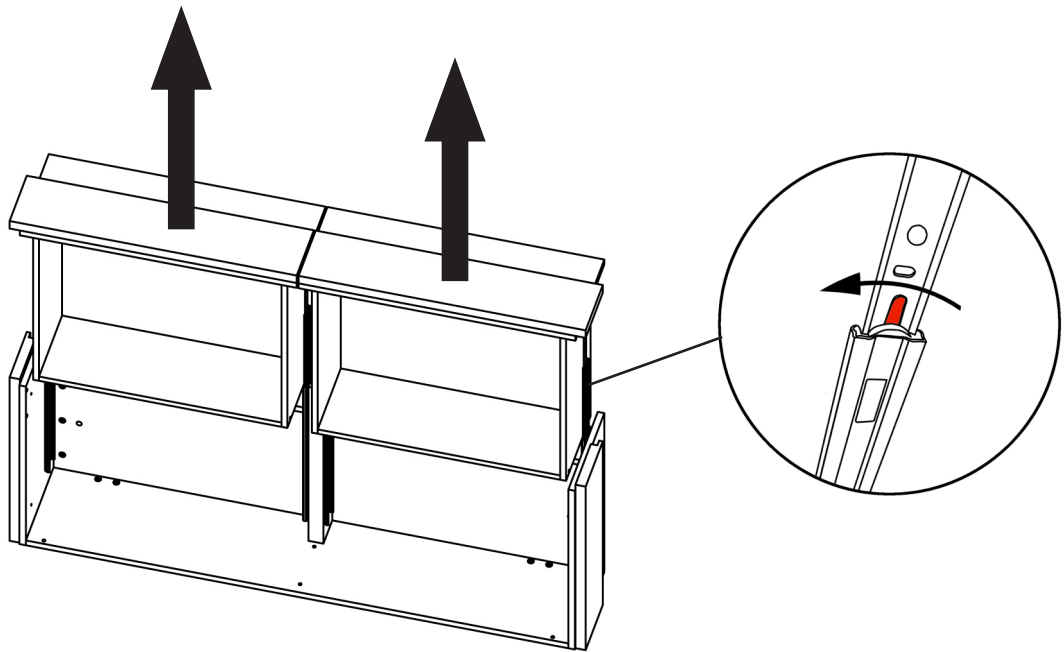

3

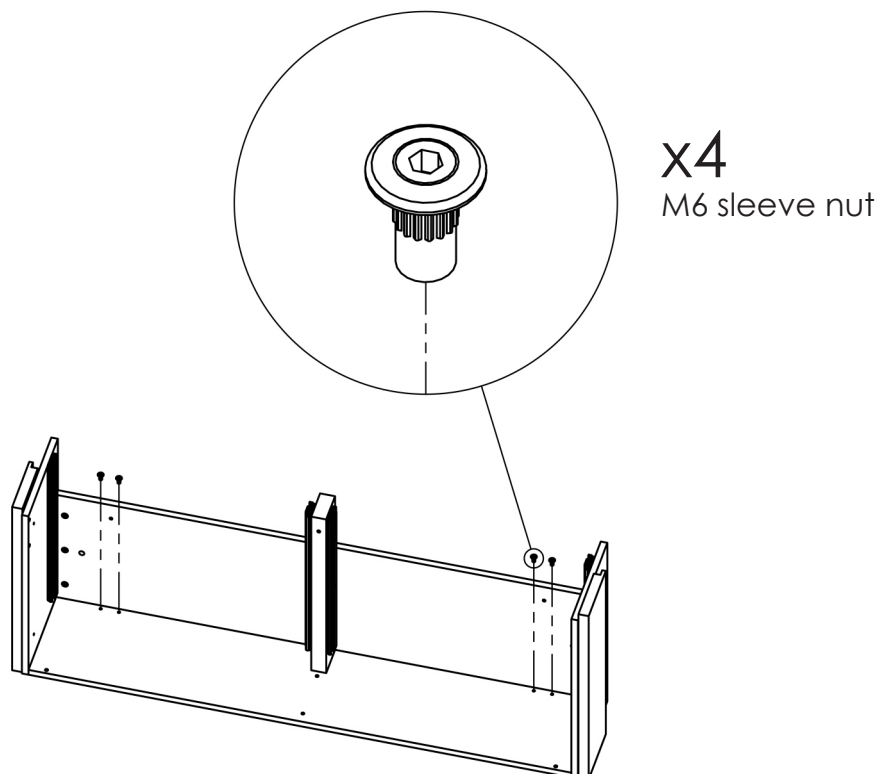


4

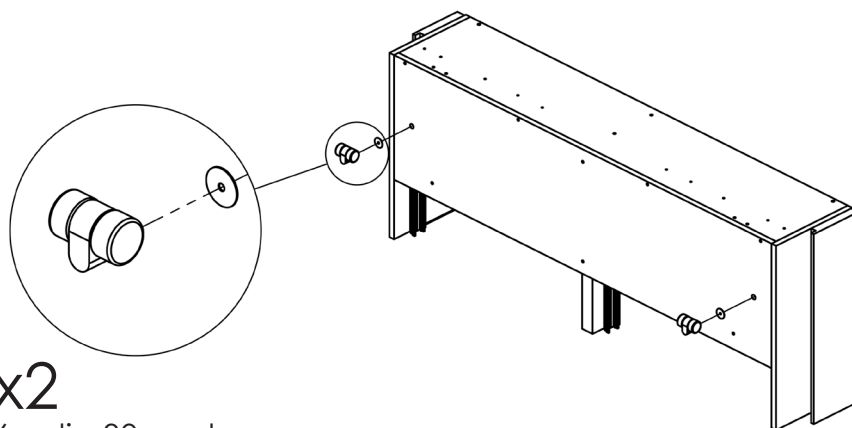


x2
6 x dia 30 washer
Twin wheel castor

5

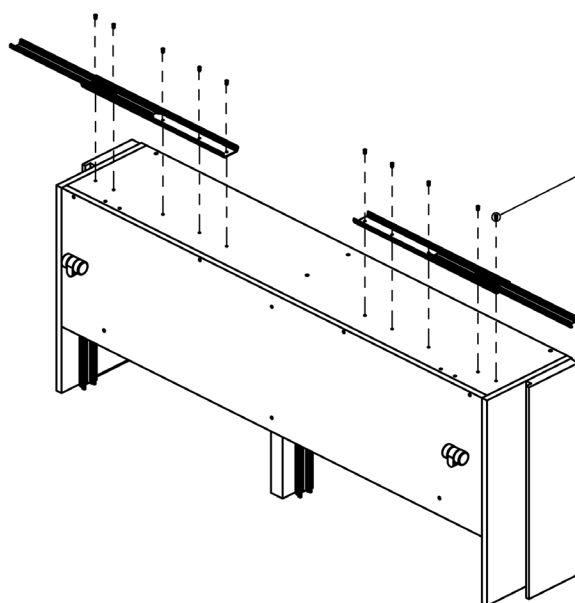


x10
Eurocrew 6.3 dia x 11

6

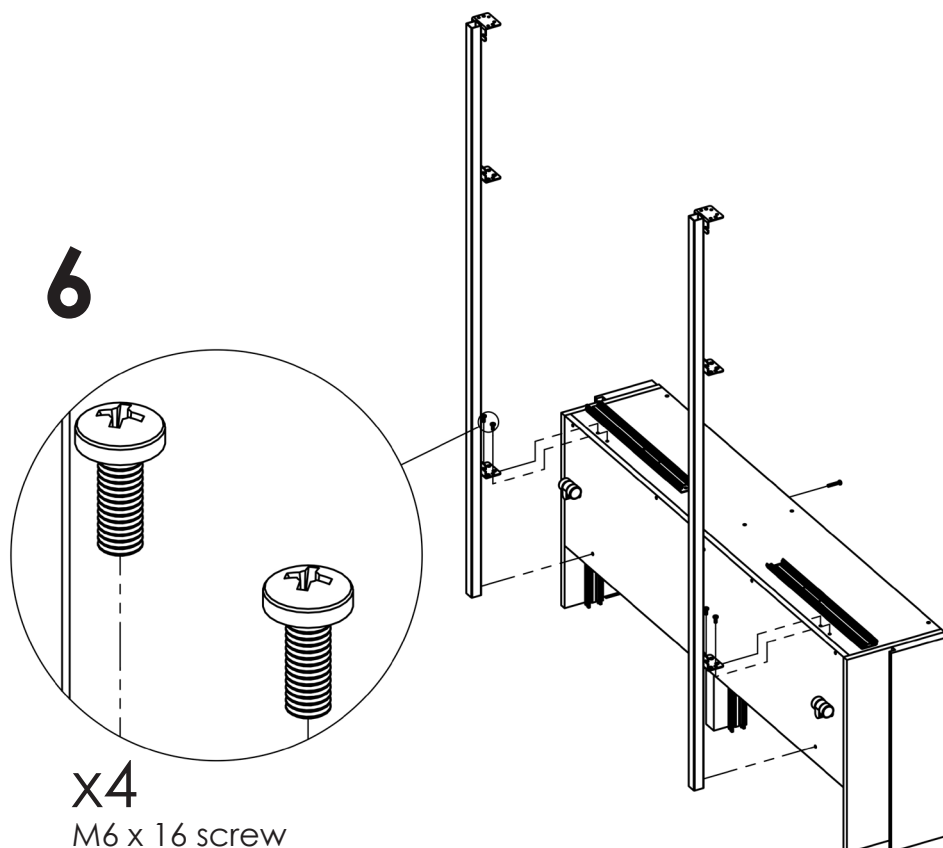


x4
M6 x 16 screw

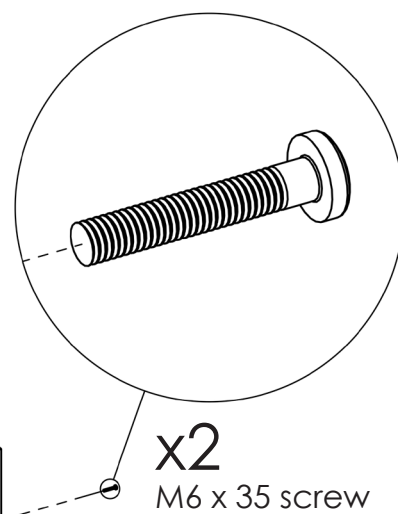


x2
M6 x 35 screw

7

Pre-assemble the Head End Panel

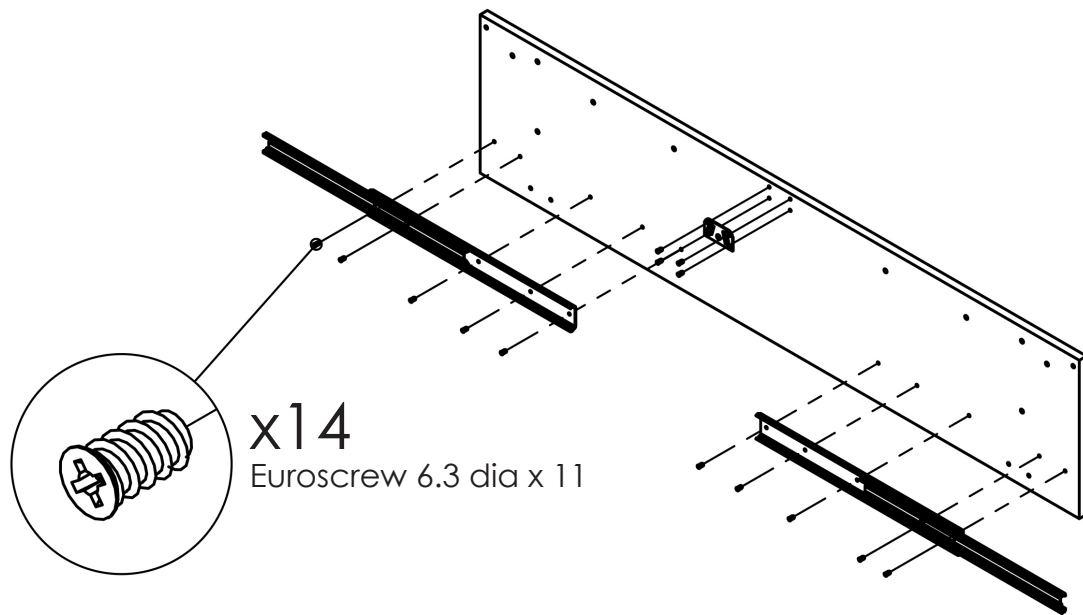


8

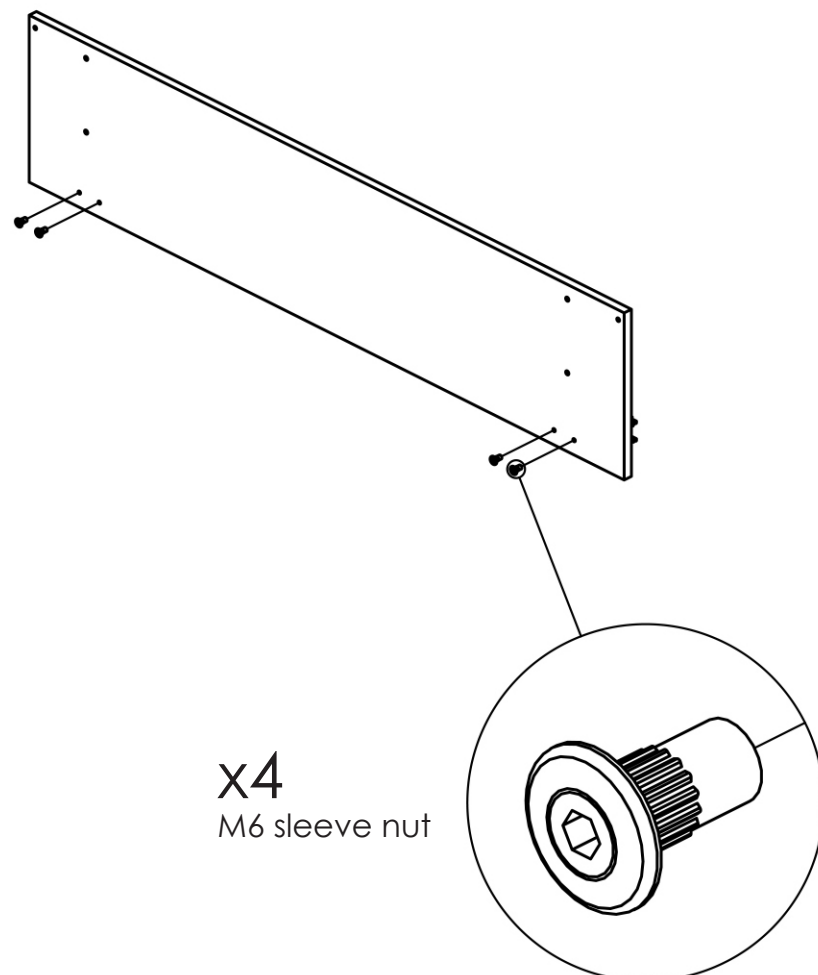


9

Pre-assemble the Mid Cross Panel

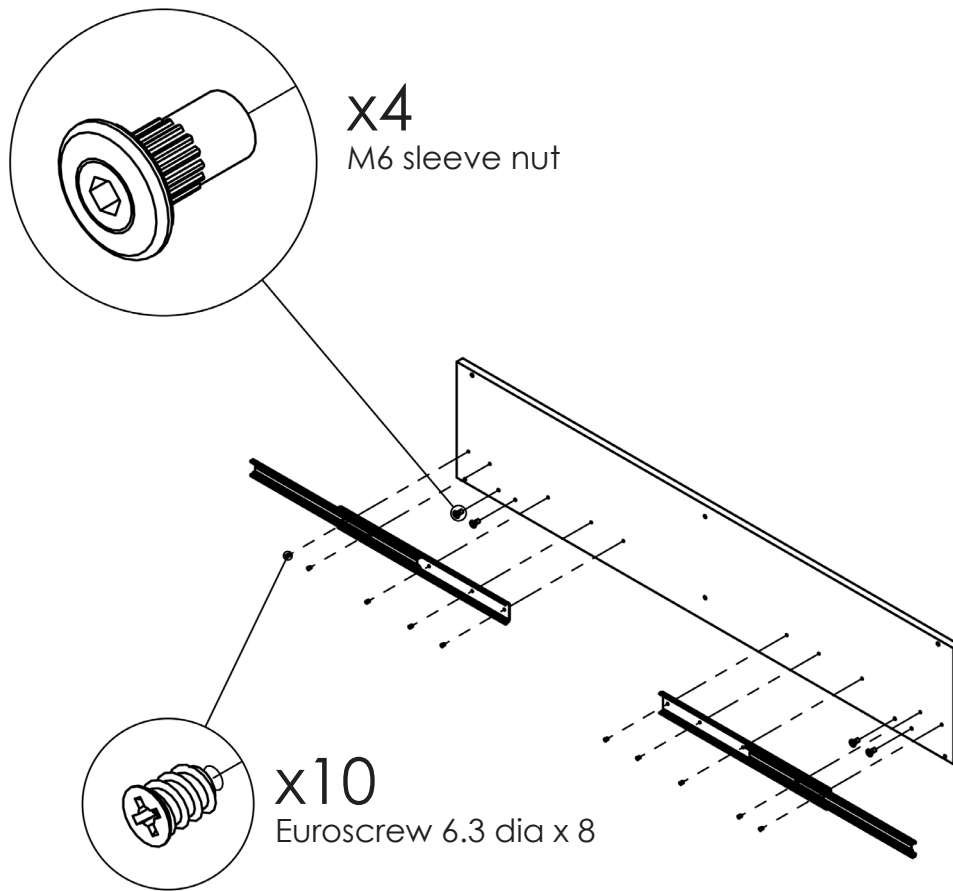


10

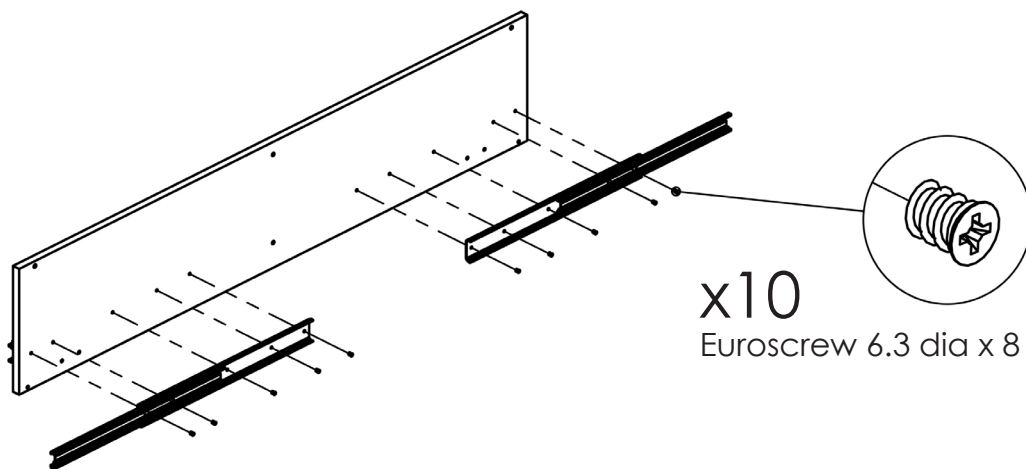


11

Pre-assemble the Side Rails

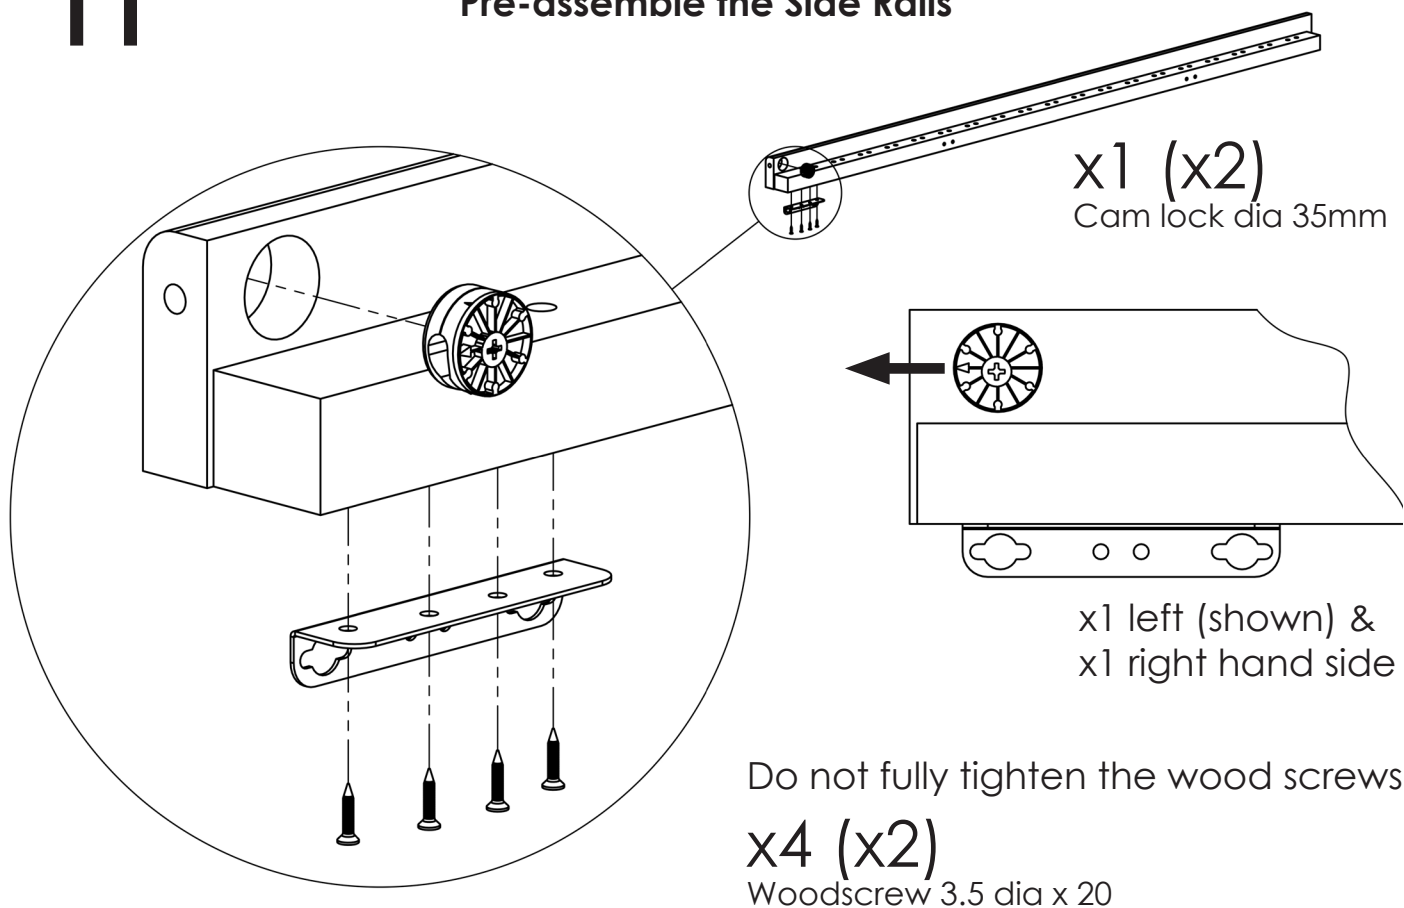


12

Pre-assemble the Castor Brackets (if fitted)

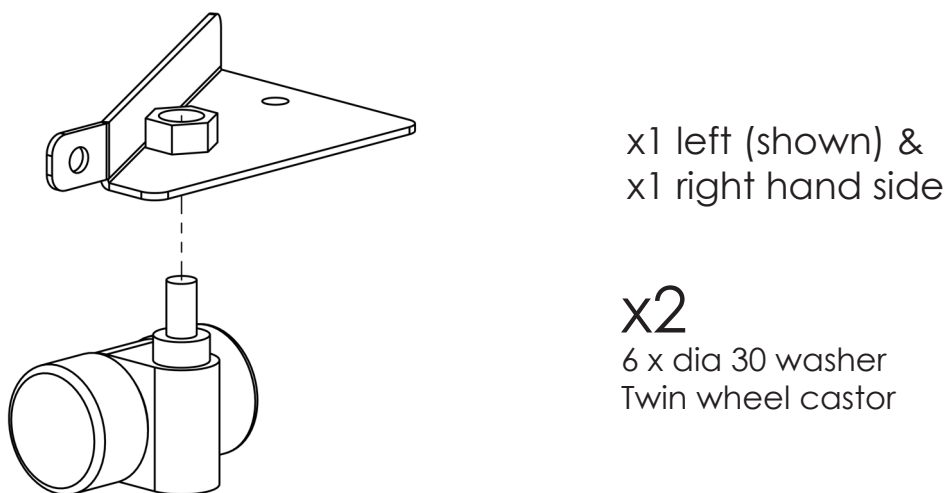


13

Pre-assemble the Bedside Drawers


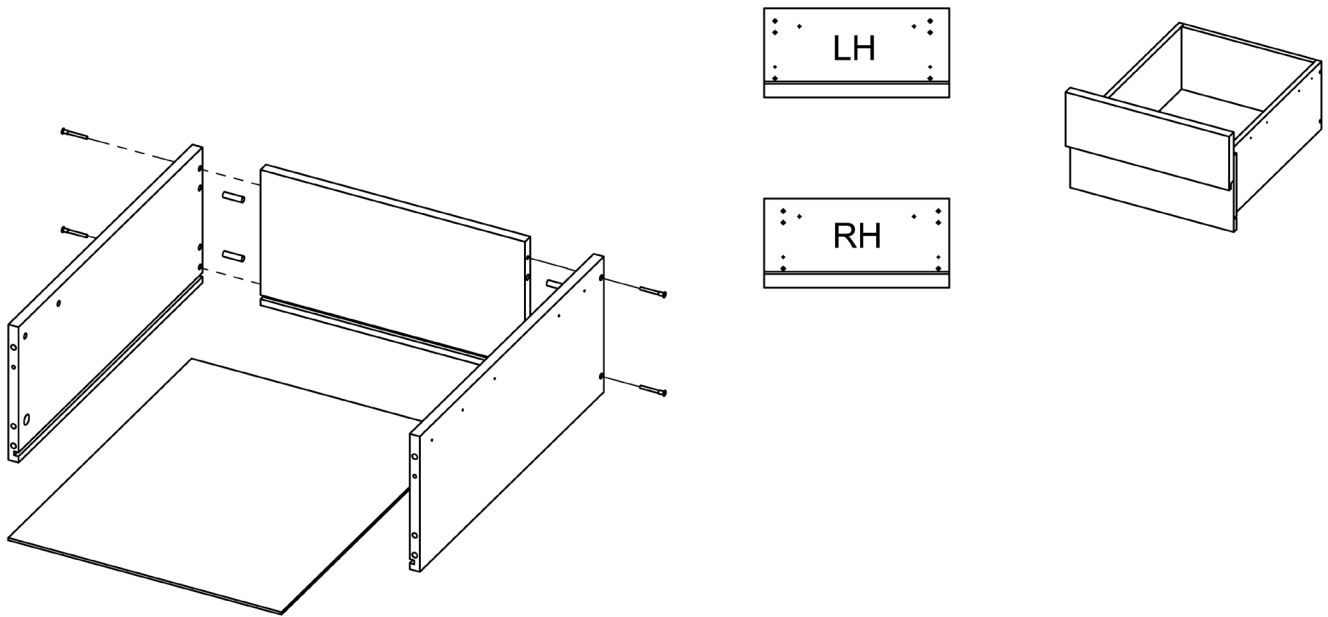


14


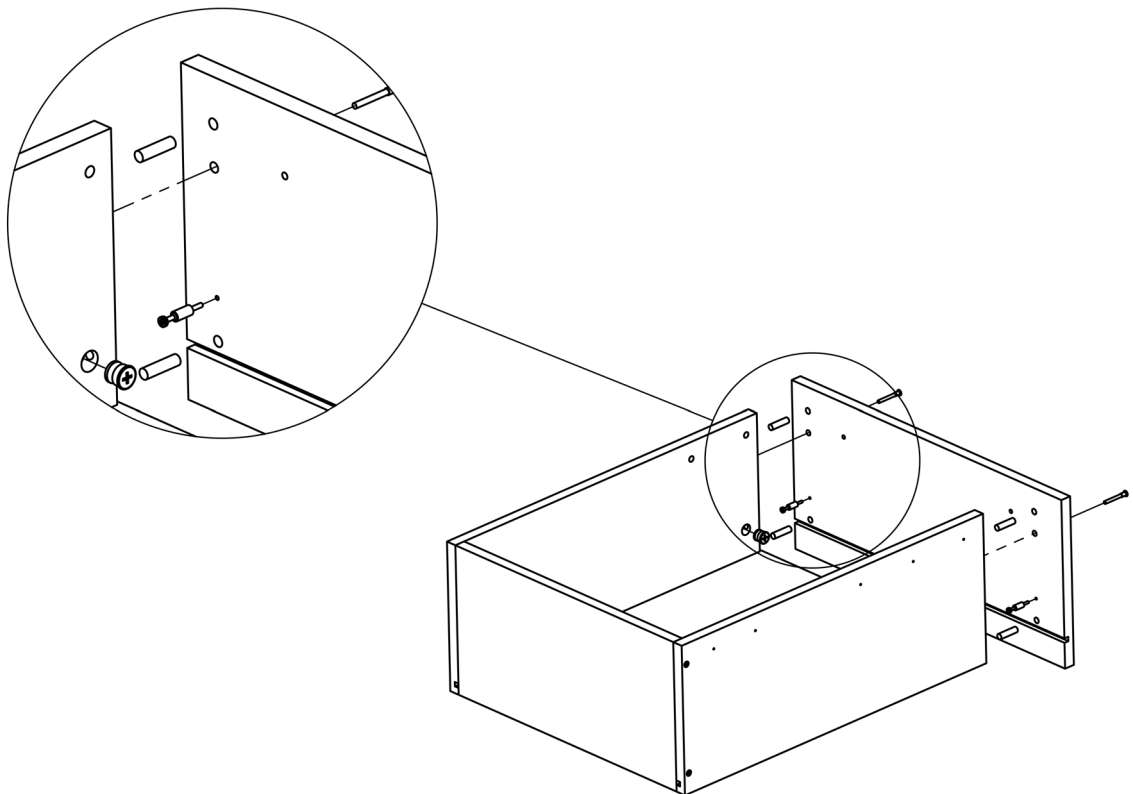


15


Pre-assemble the Large Side Drawers

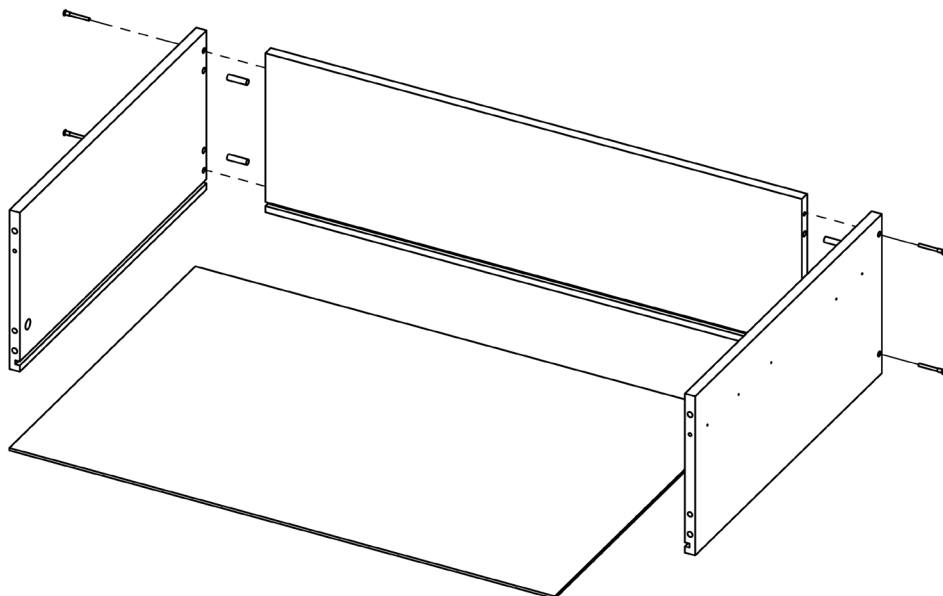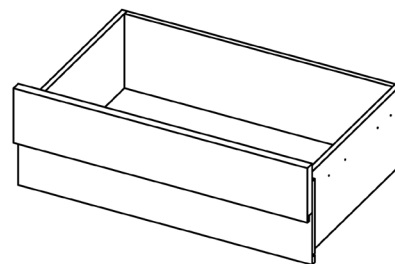


16

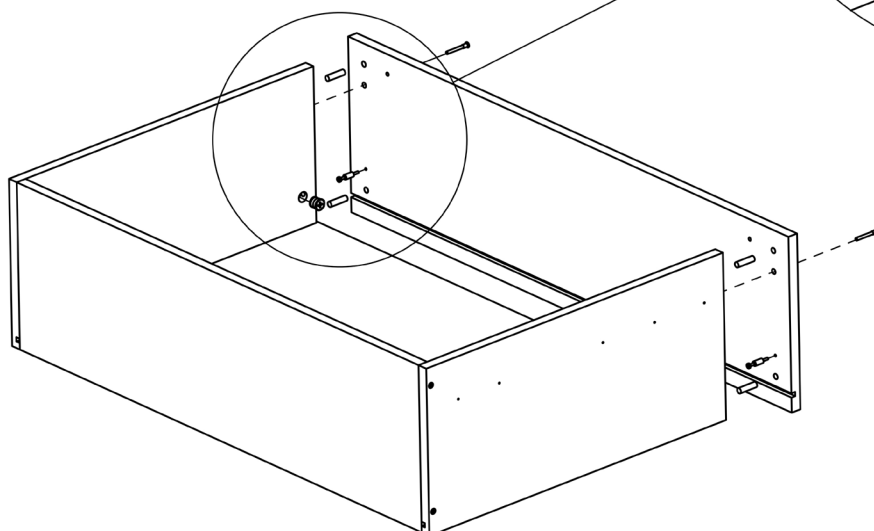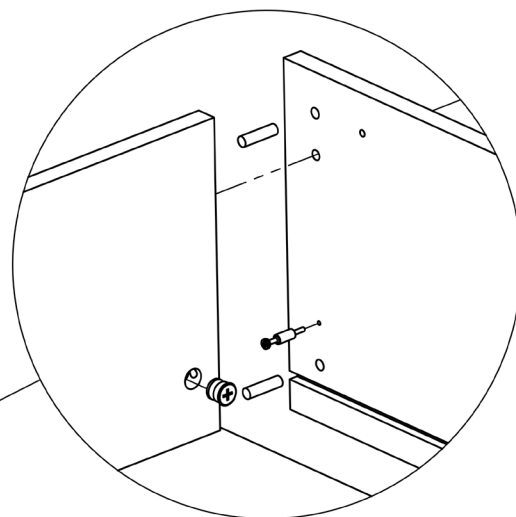

17

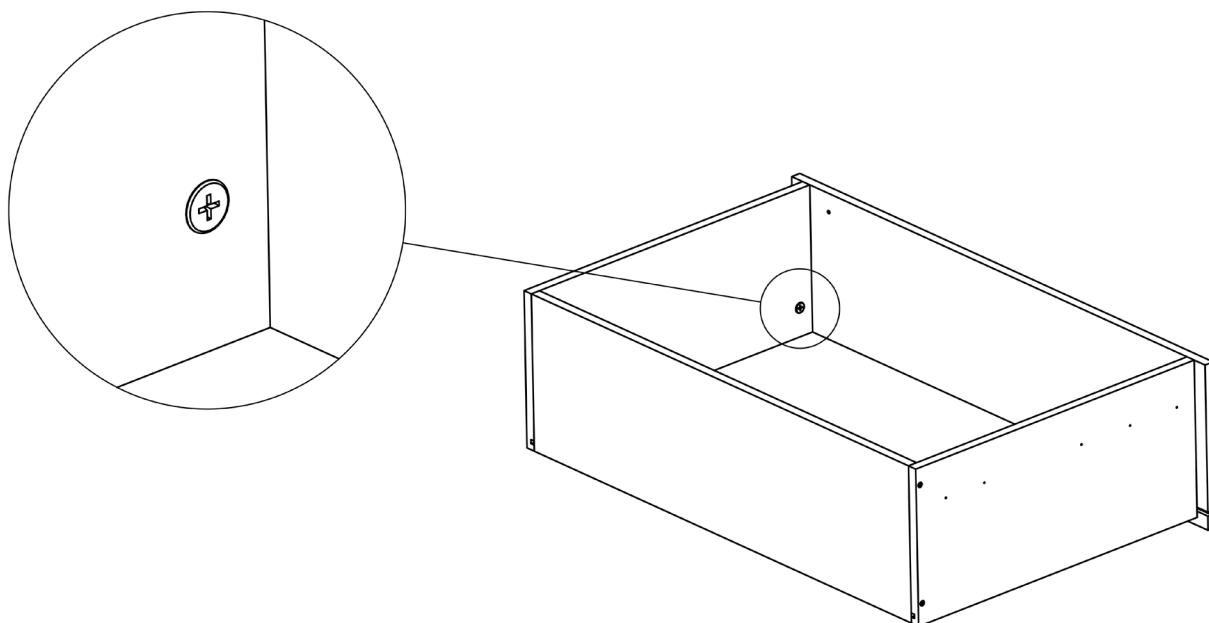


18

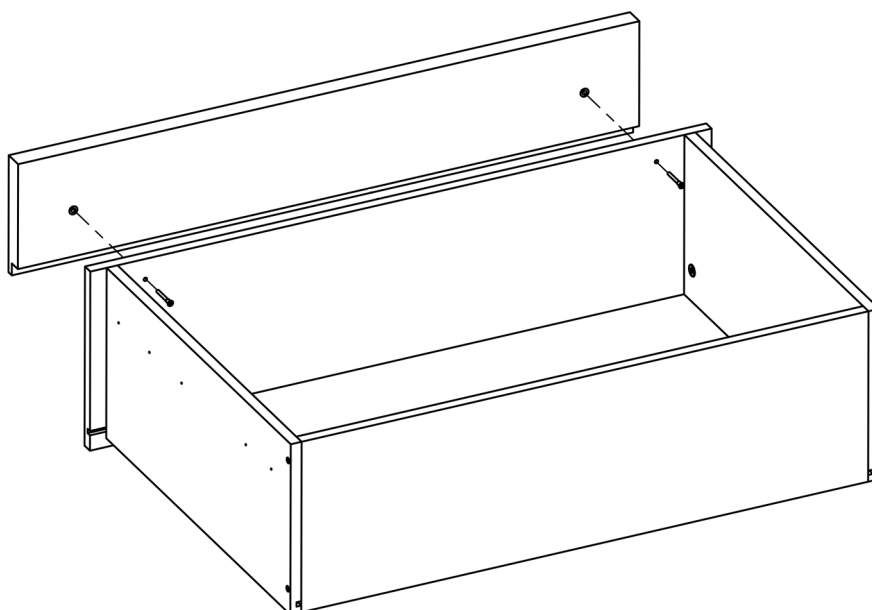


19


Bed Assembly

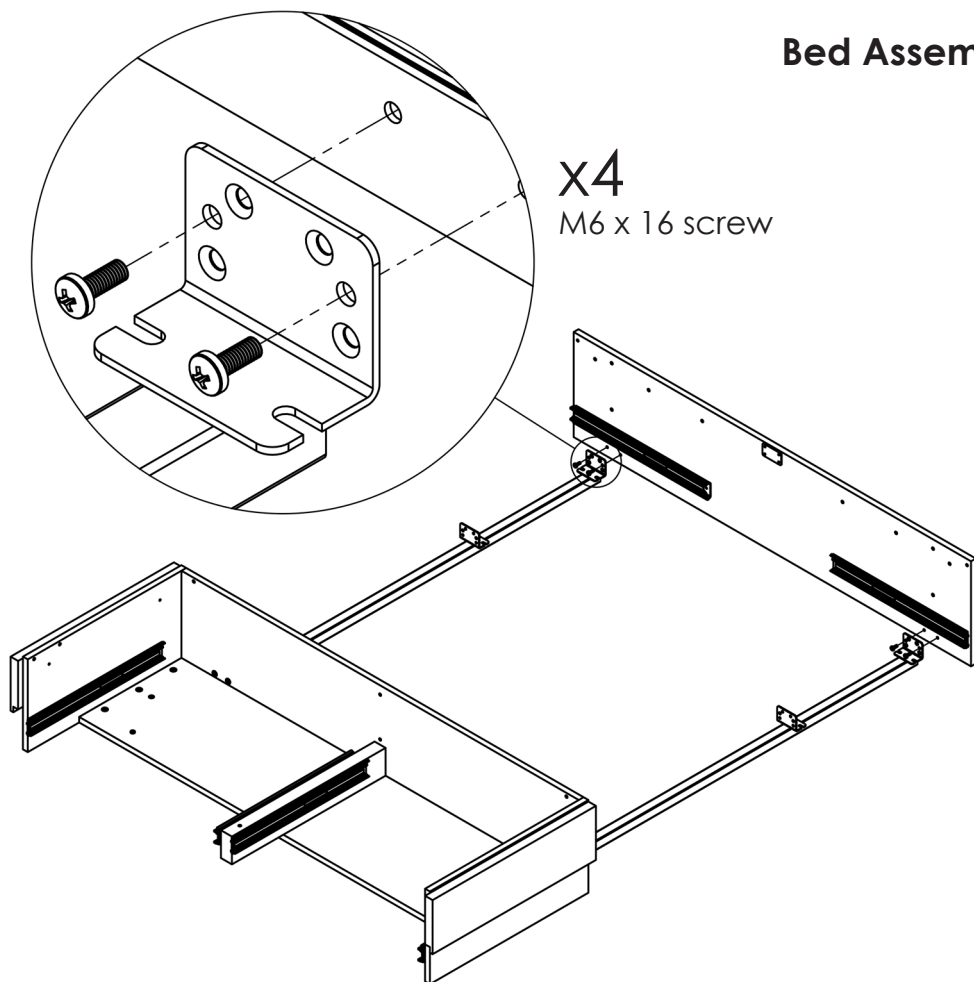


20

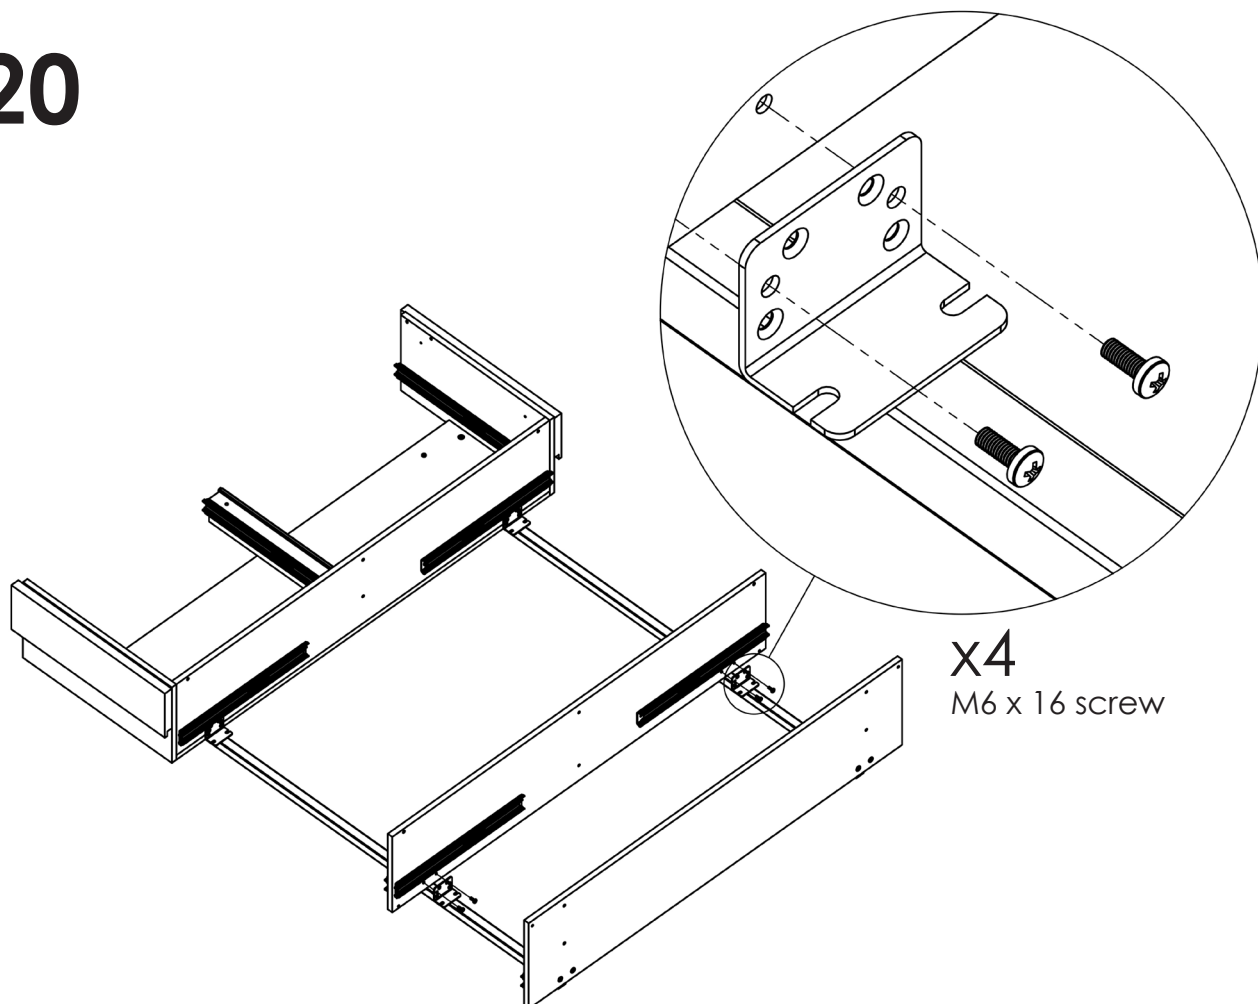


21

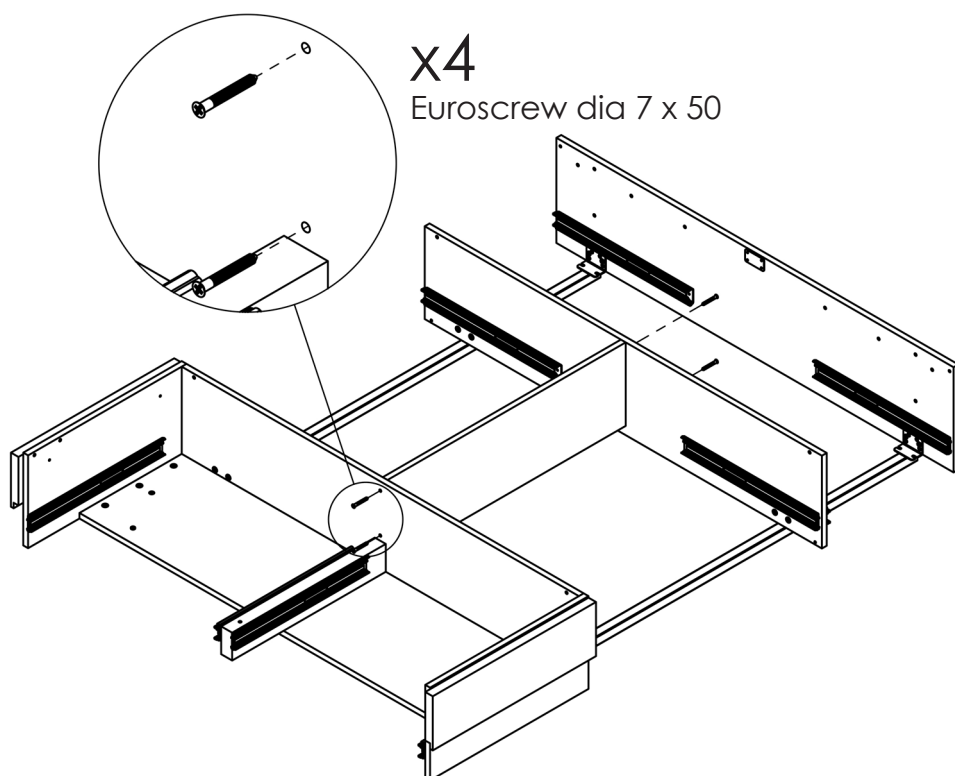


22

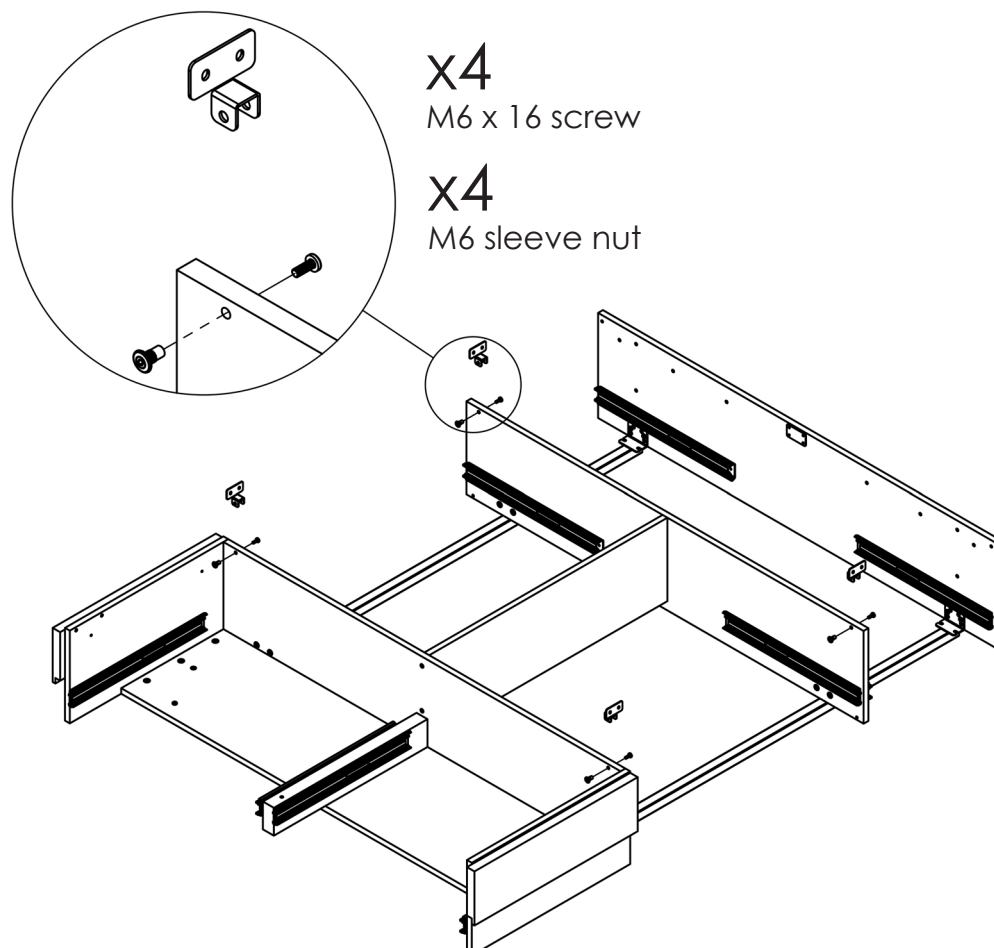

23

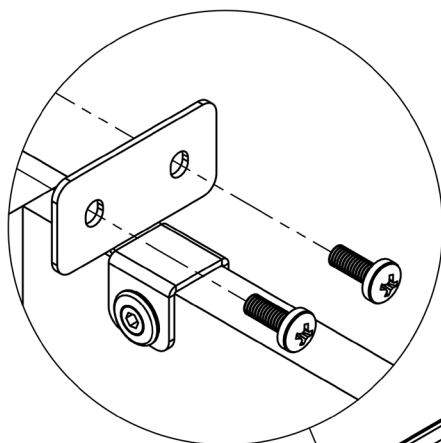


x8
M6 x 16 screw

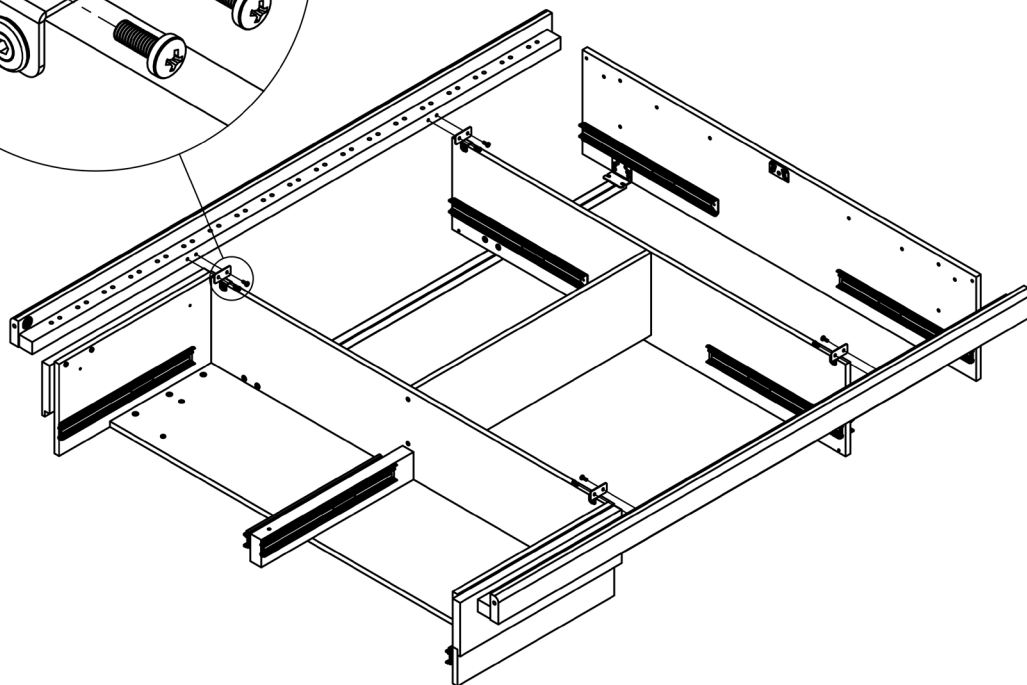


24


Now tighten wood screws from Step 11

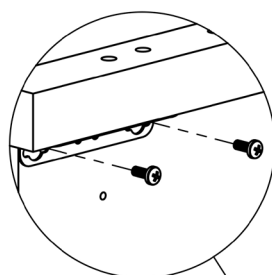


x4
M6 x 16 screw

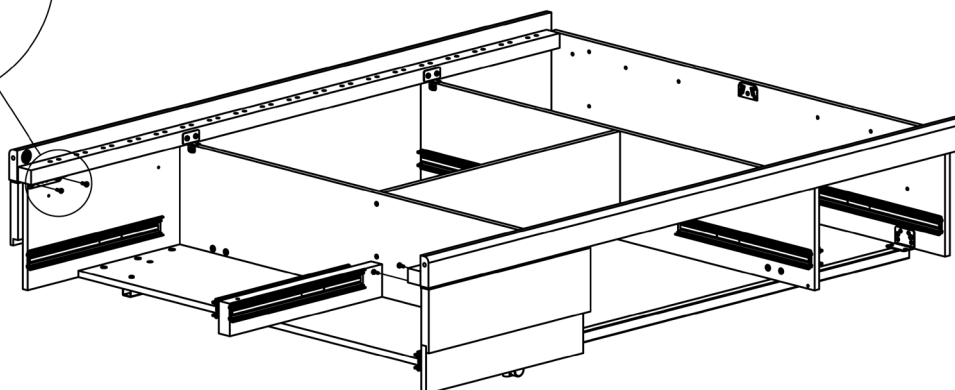


25

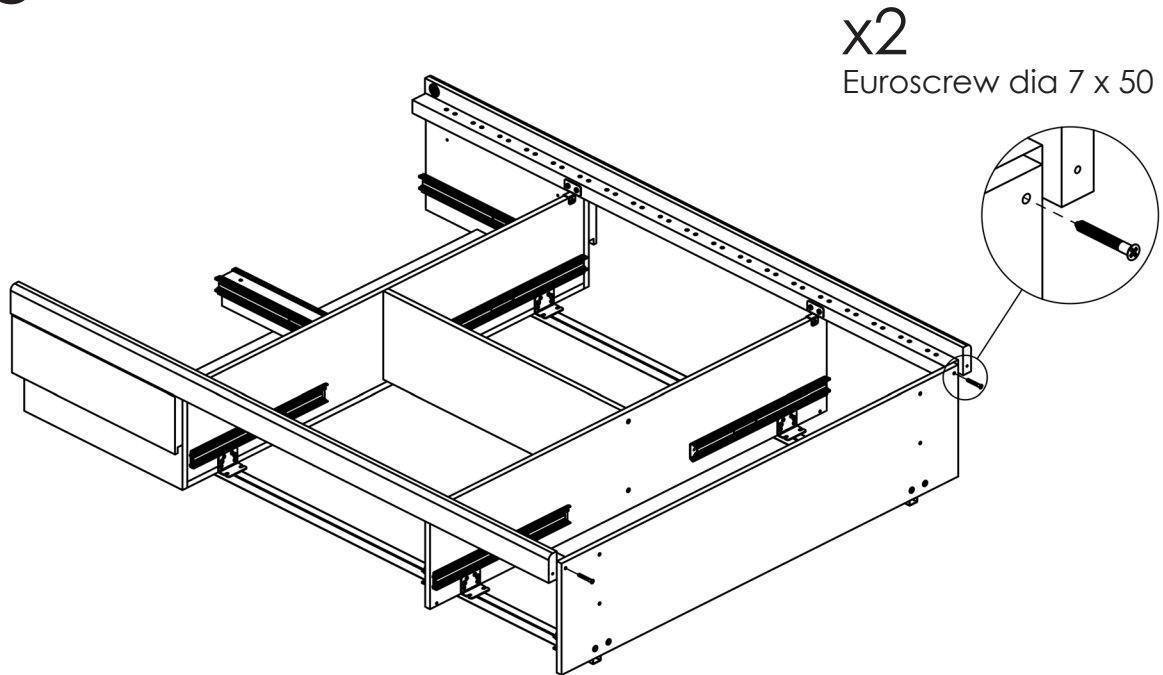

26

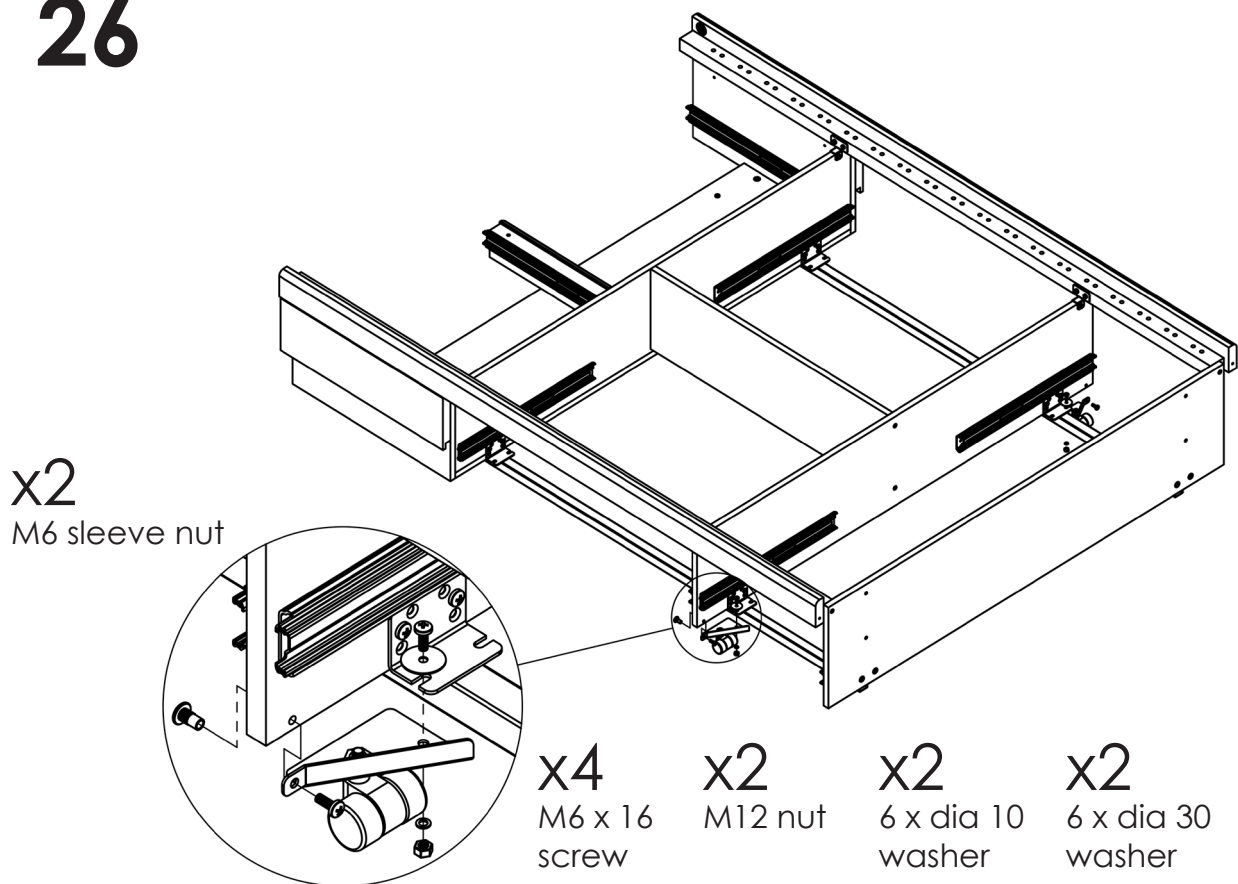


27

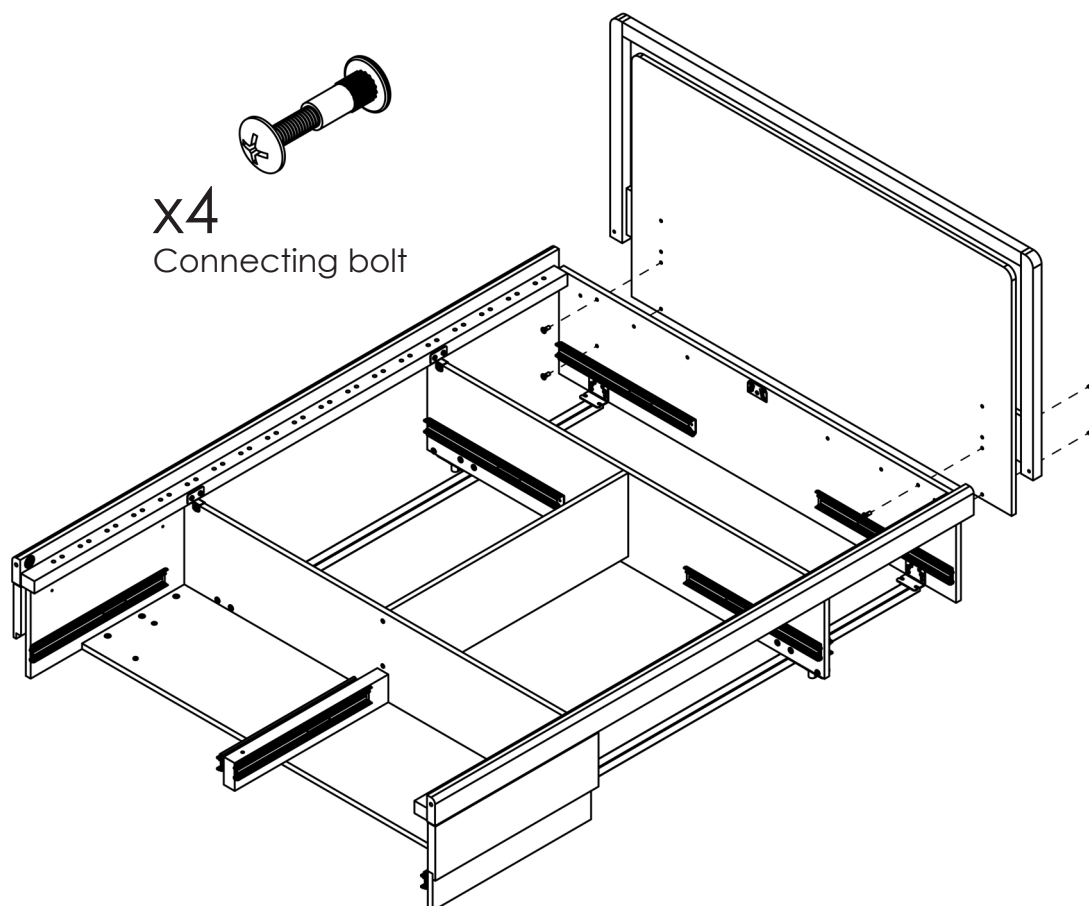


28


x2
Euroscrow dia 7 x 70

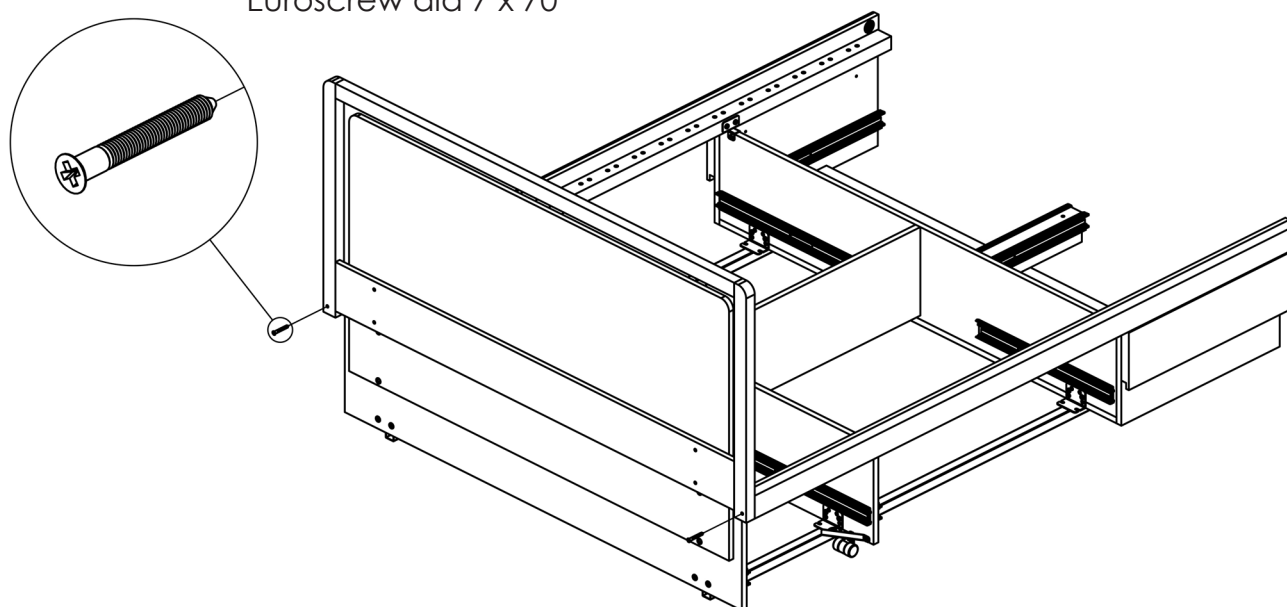


29

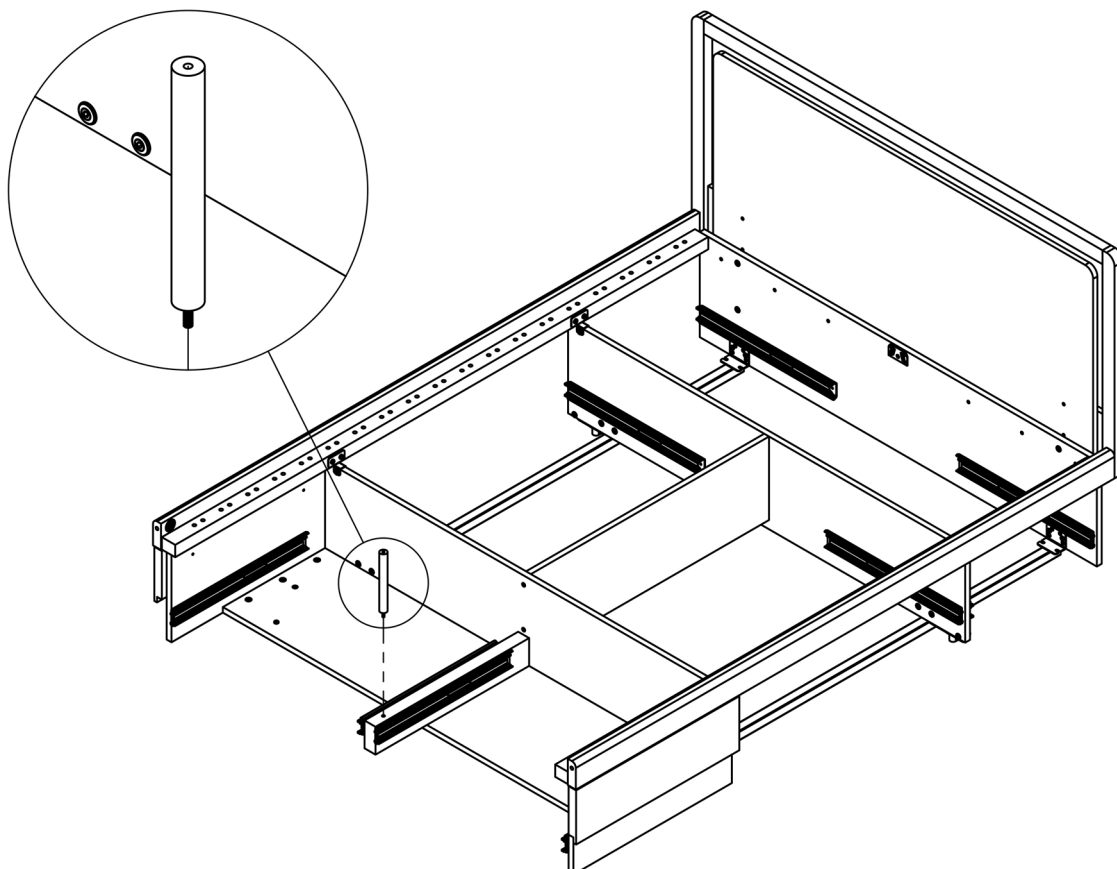


30

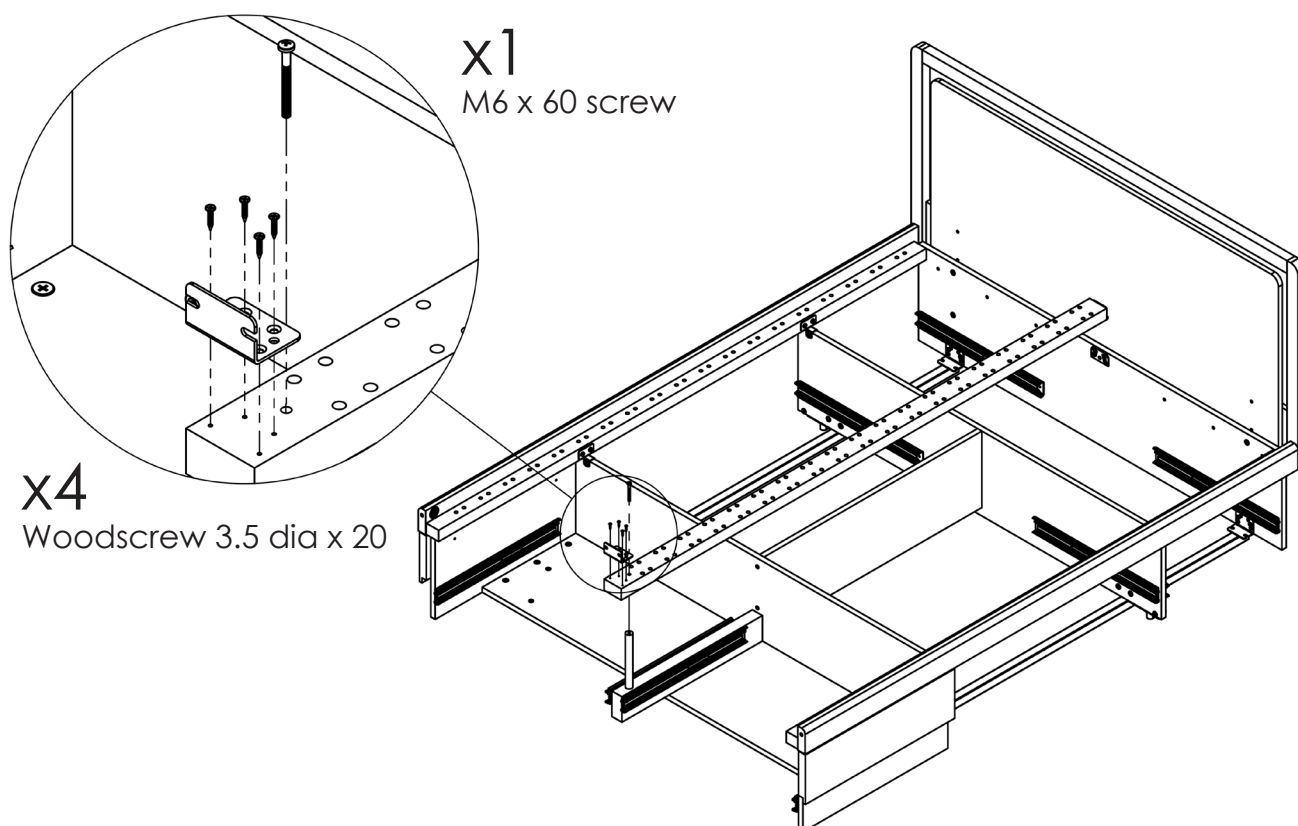


31

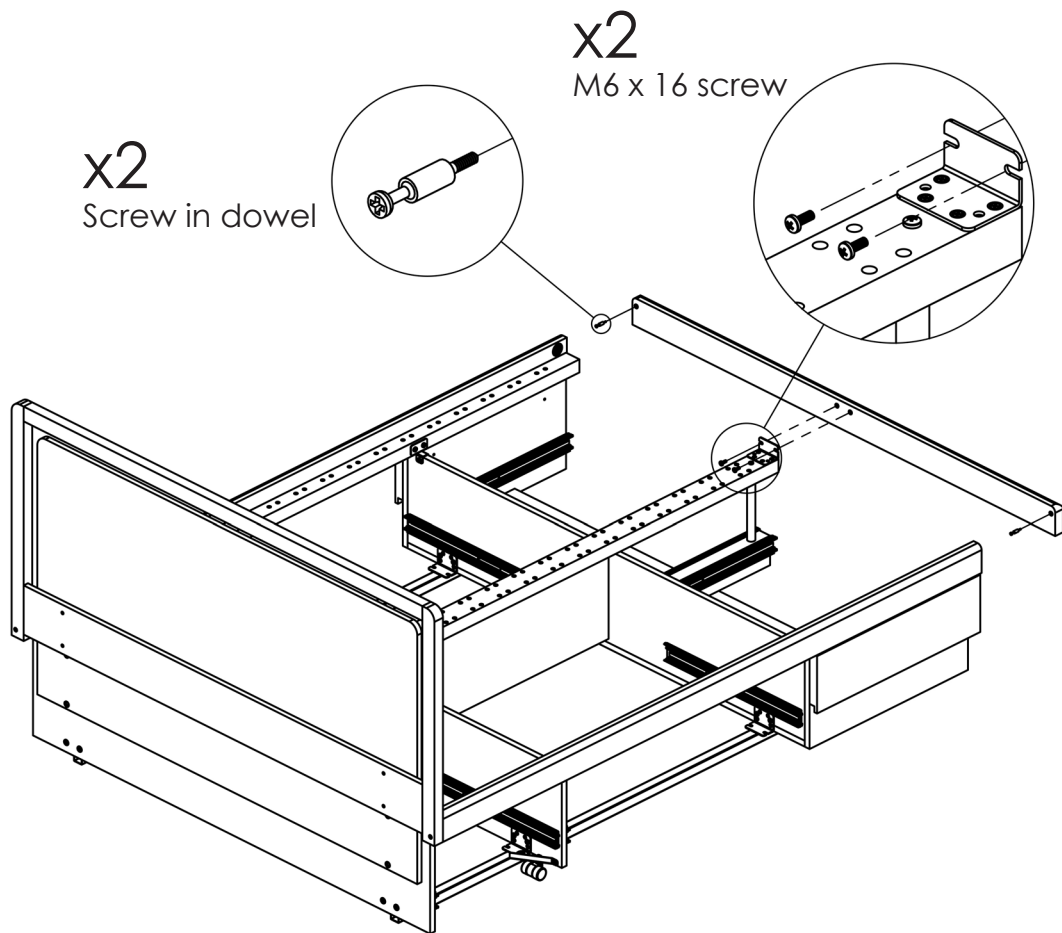


32

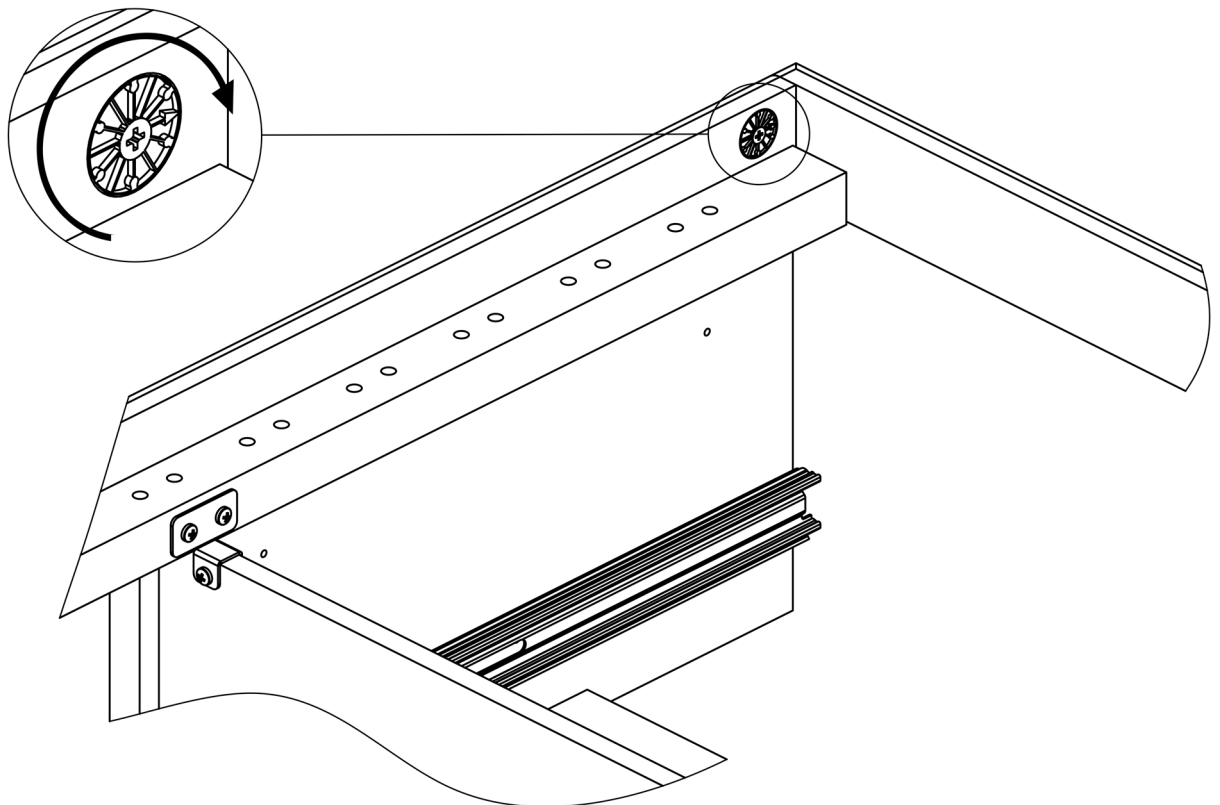


33

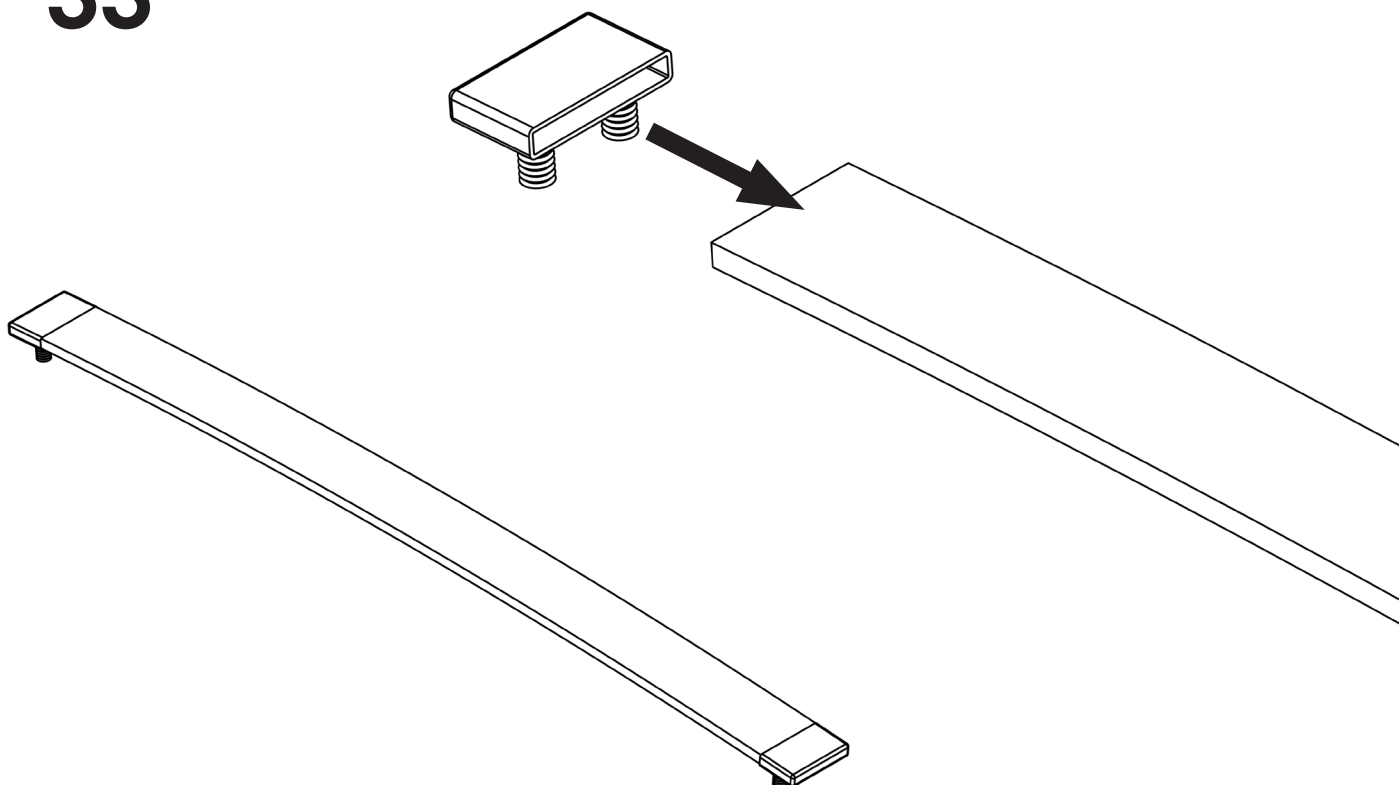

34

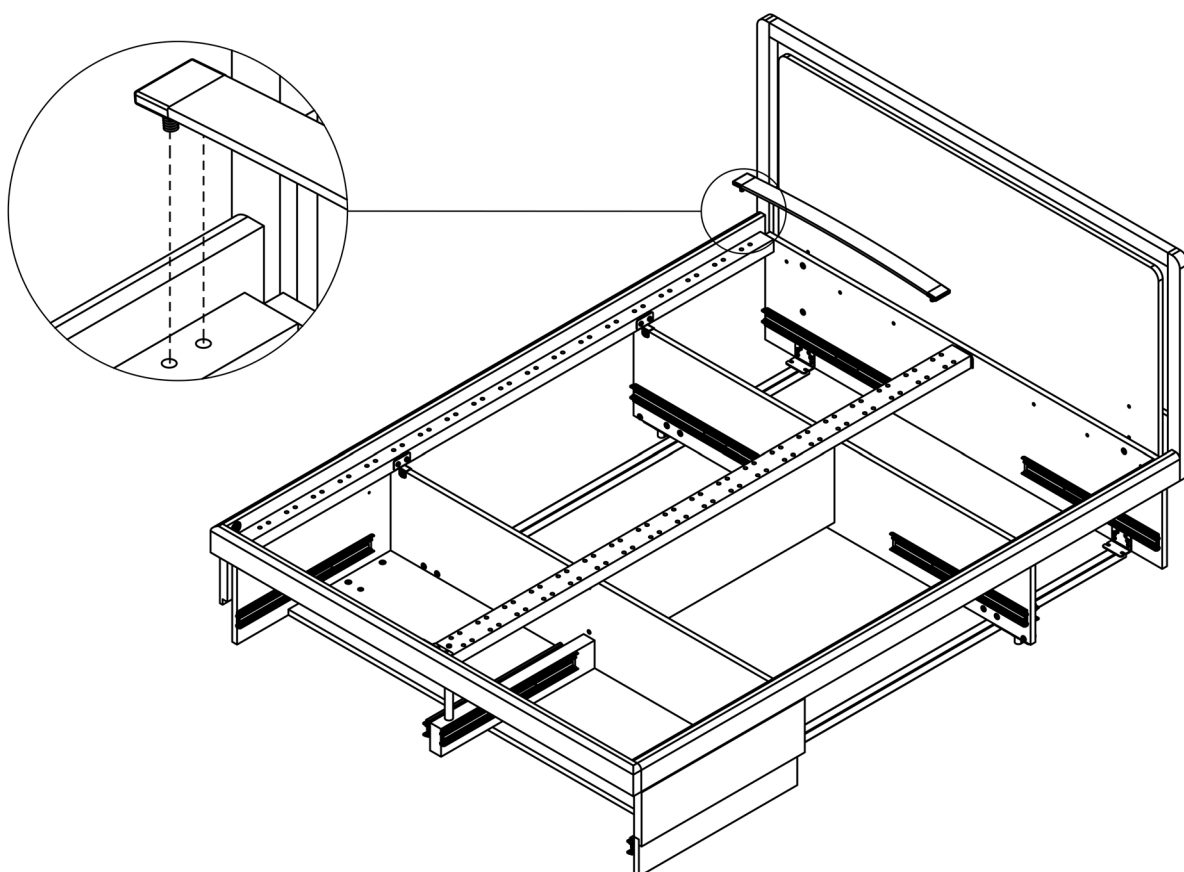

35

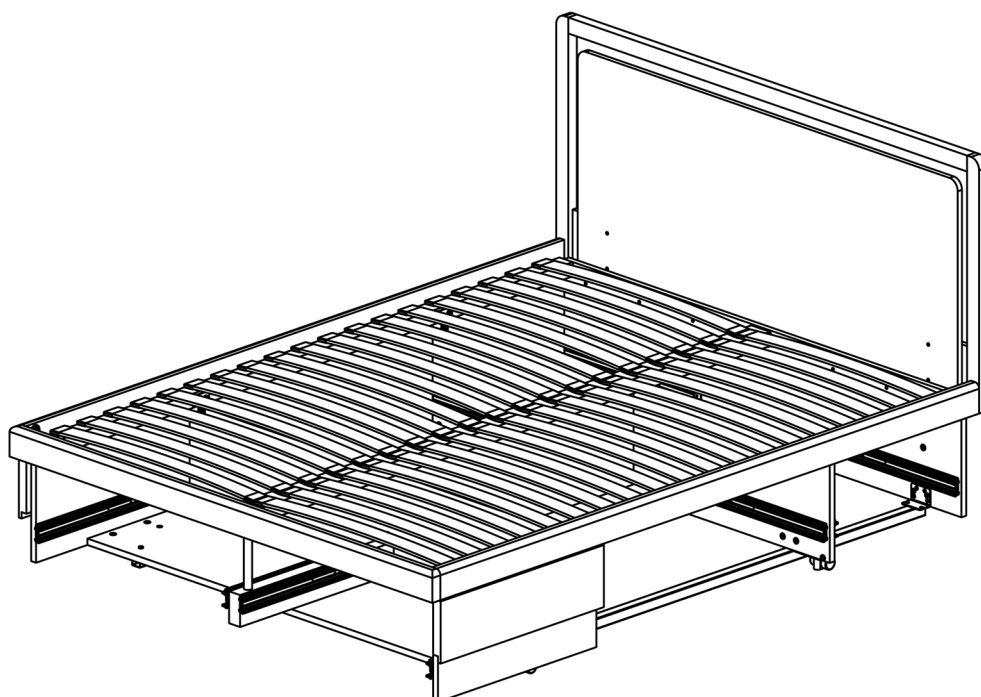

36

