



The bed comprises the following boxes:

- Foot end carcass /head end panel and all assembly fixings
- 2 x side drawer carcass
- Left hand large drawer and bedside
- Right hand large drawer and bedside
- Top surround rail
- Headboard
- Lift up bedside table (optional)
- Metal under frame rails
- 2 x sets of slats.

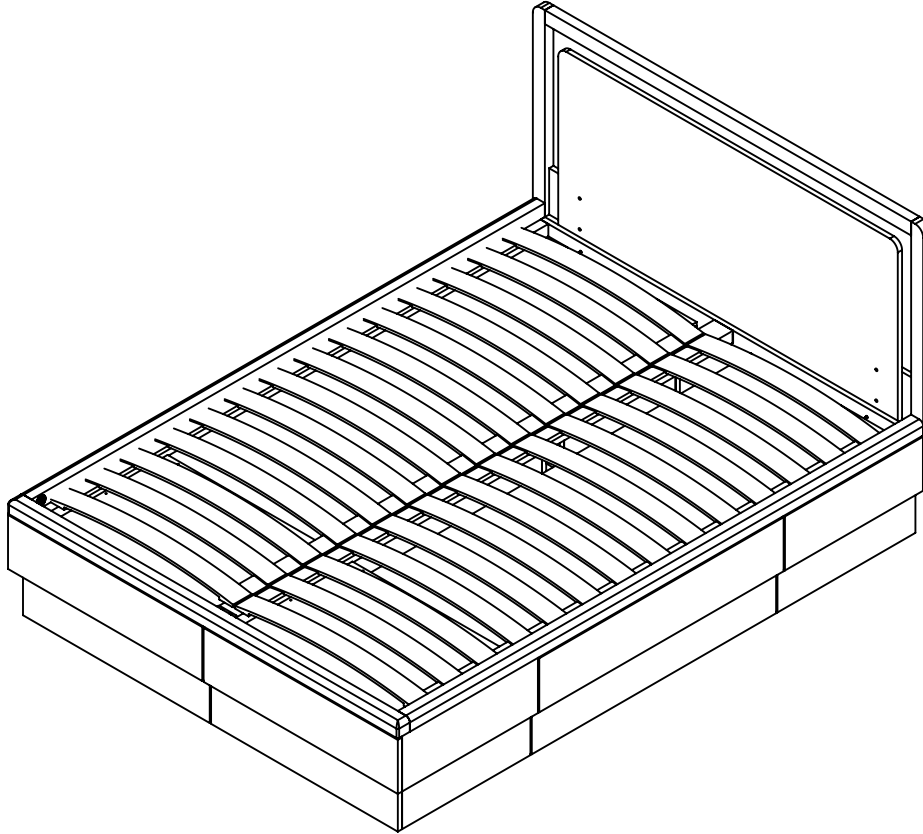


This will require two people. Please refer to the accompanying drawings.

1. Remove the contents from box 1 (Foot end carcass /head end panel and all assembly fixings)
2. Remove the four drawers from the foot end carcass by disconnecting the drawer runners: Fully open each drawer in turn. In the centre of the runner is a black plastic lever. Push the lever upwards on the right hand runner and downwards on the left hand runner whilst simultaneously opening the drawer further. The runner will separate and the drawer can be removed

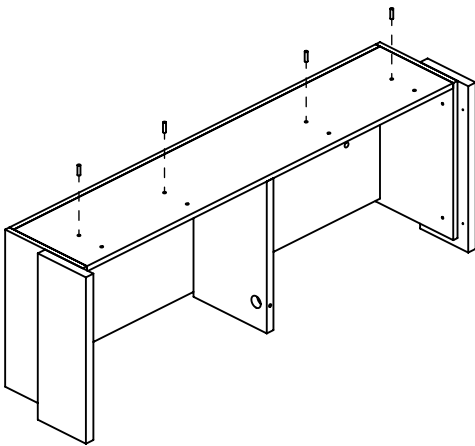



3. Turn the end carcass so it rests on the floor with the drawer opening face down.

4. Insert the 4 dia 8 dowels into the holes A leaving the ends protruding.

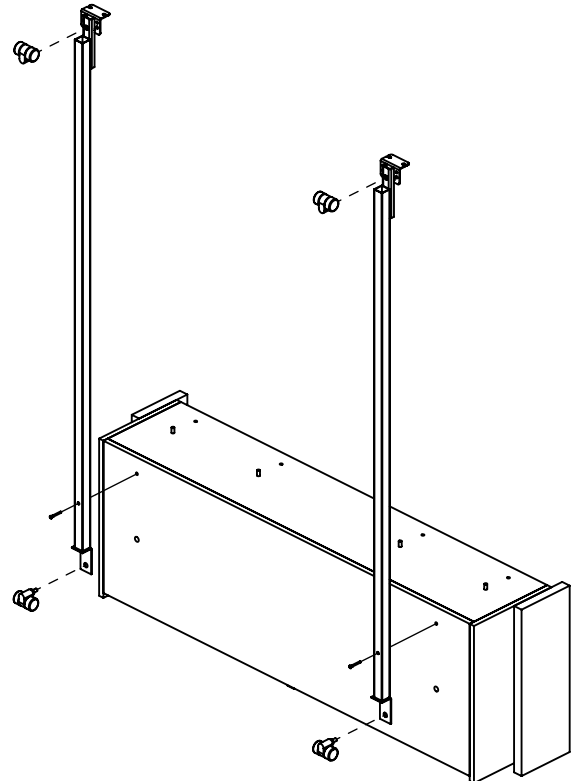

5. Attach the two metal rails to the end carcass using a castor and screw for each piece.

6. Screw the castor in position at the head end of the metal rail.

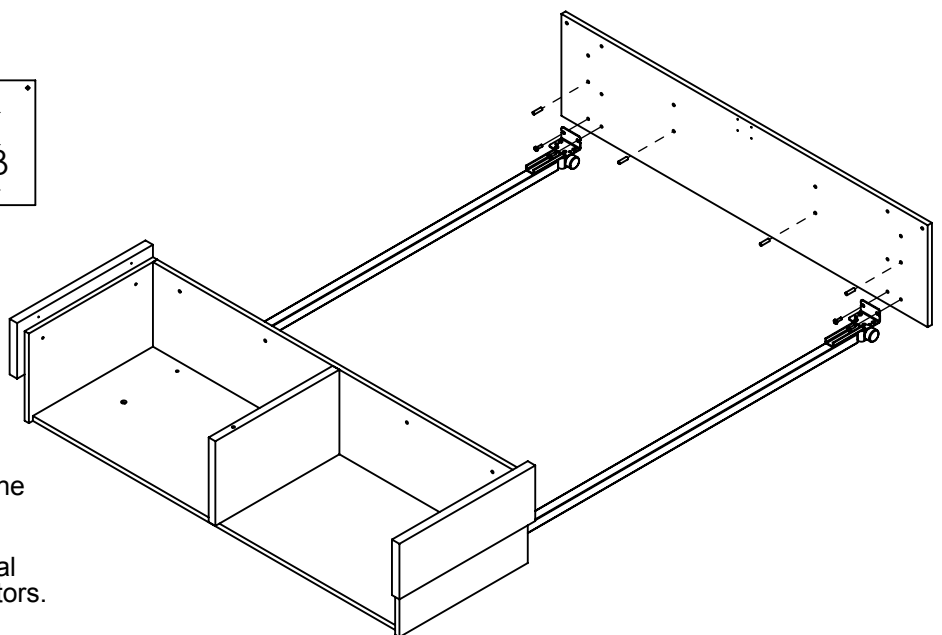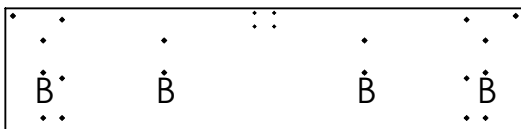


7. Lower the frame down so it rests on the four castors.

8. Attach the head end panel to the metal frame using the four shortscrew connectors.

9. Insert the four dia 8 dowels into the holes B.

10. Taking each side in turn, carefully lower the side carcass into position resting on the wooden dowels.


11. Line up the fixing holes and attach the side carcass using the four long screw connectors.

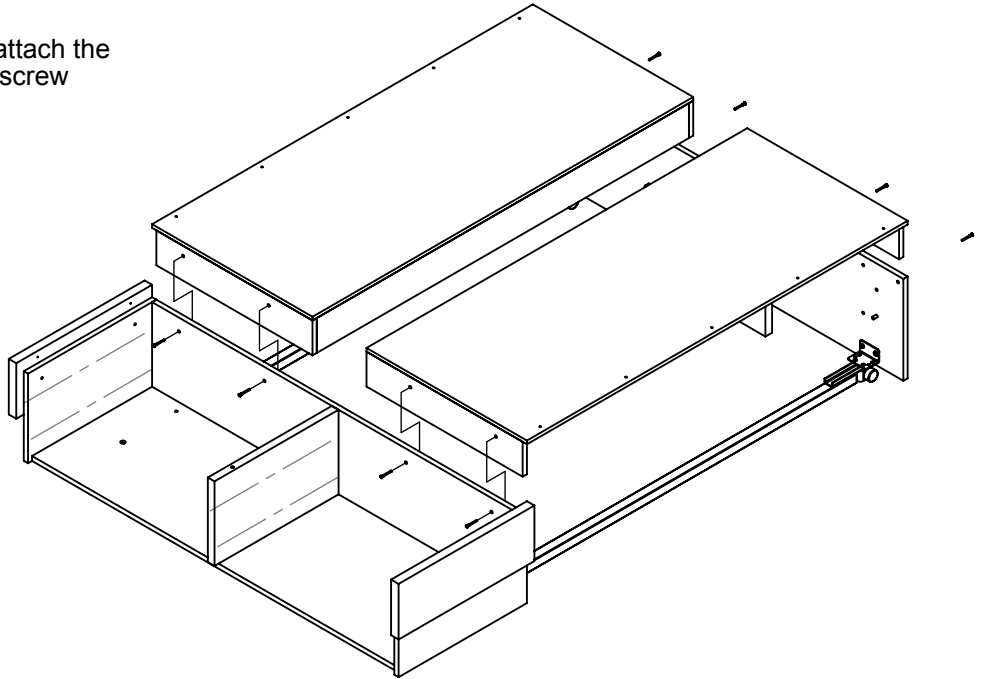

12. Rest the two side rails in position on the side carcasses and attach to the foot end carcass using the two long M6 screws each side.

13. At the head end fix the side rails to the head end panel using the 50mm euro screws.




14. Fix the side carcass to the side rails using the five woodscrews each side.

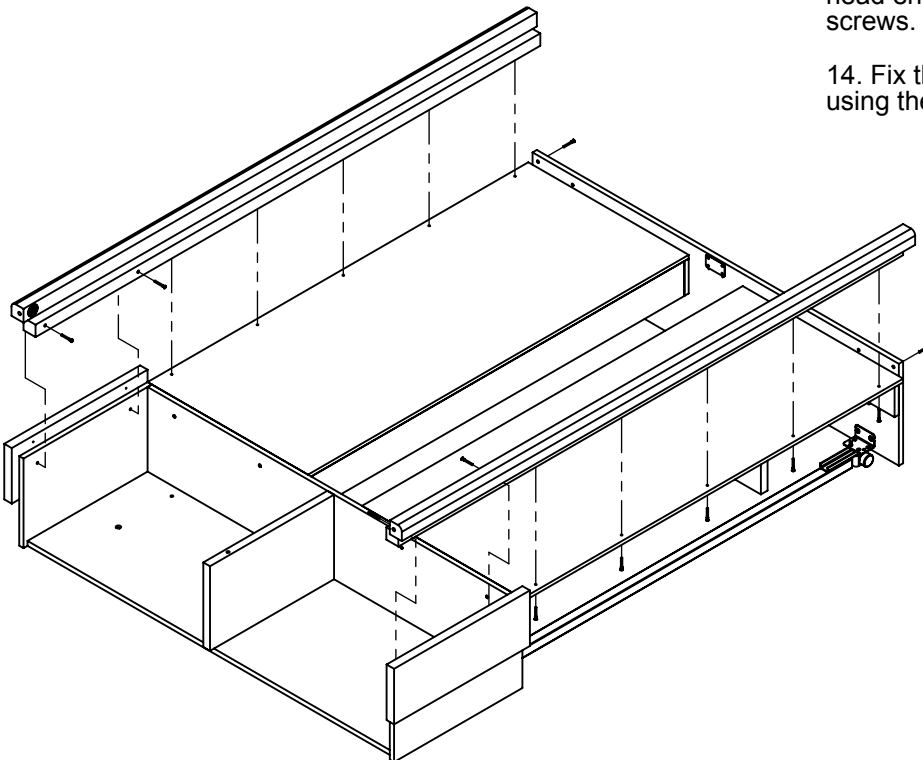




15. Push the connecting cams into the recess at the foot end of each side rail ensuring the arrow points in the direction on the foot end rail.

16. Screw until tight the two connectors into the end rail fixings.



17. Slide the end rail into position and secure by tightening the connecting cams clockwise using the large allen key provided.

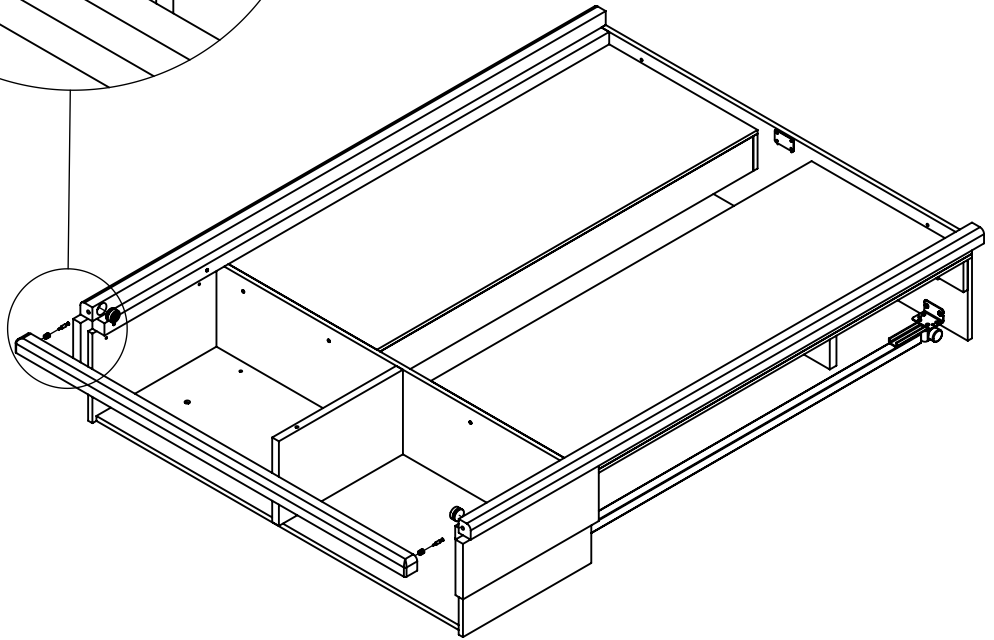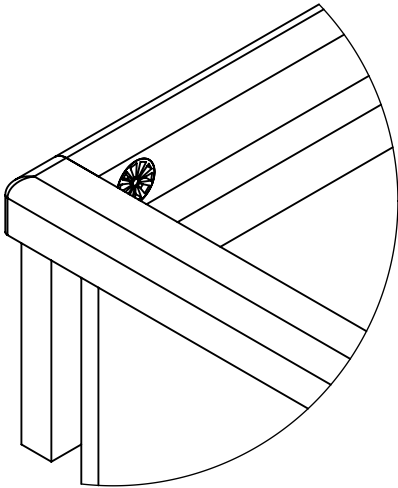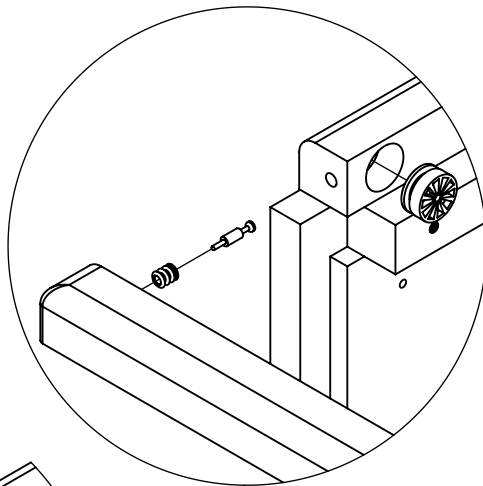


18. Fit the centre rail onto the connecting bracket at the head end. At the foot end fix it to the end carcass using the threaded fastener, hole washer and nut as shown in diagram.

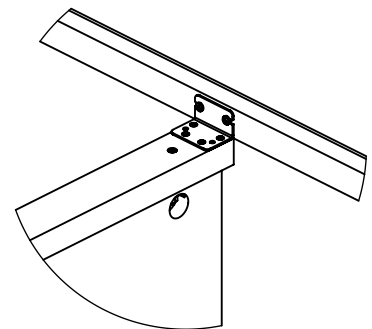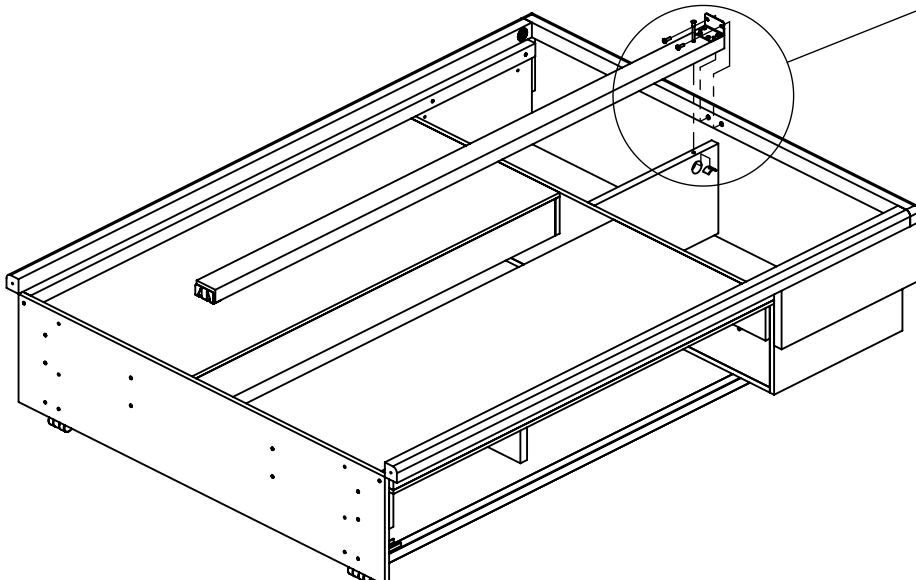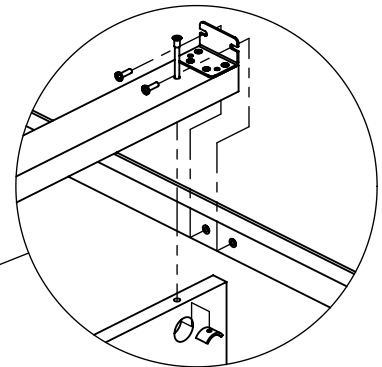

19. Position the two dust cover panels over the end carcass and attach using the two woodscrews each side into the end rail.

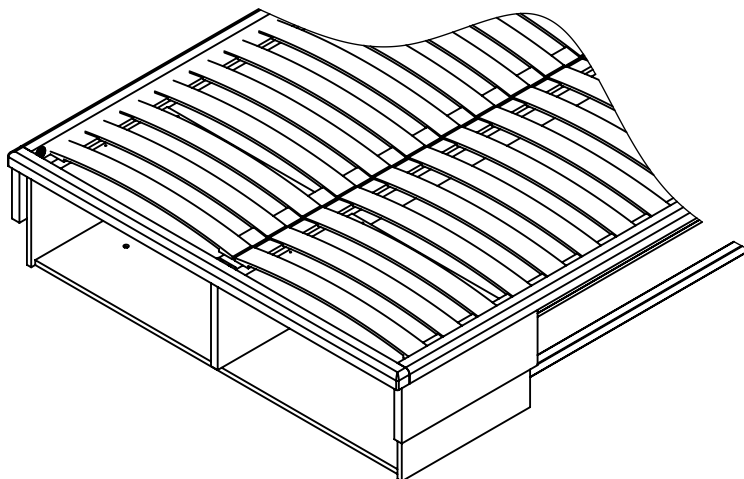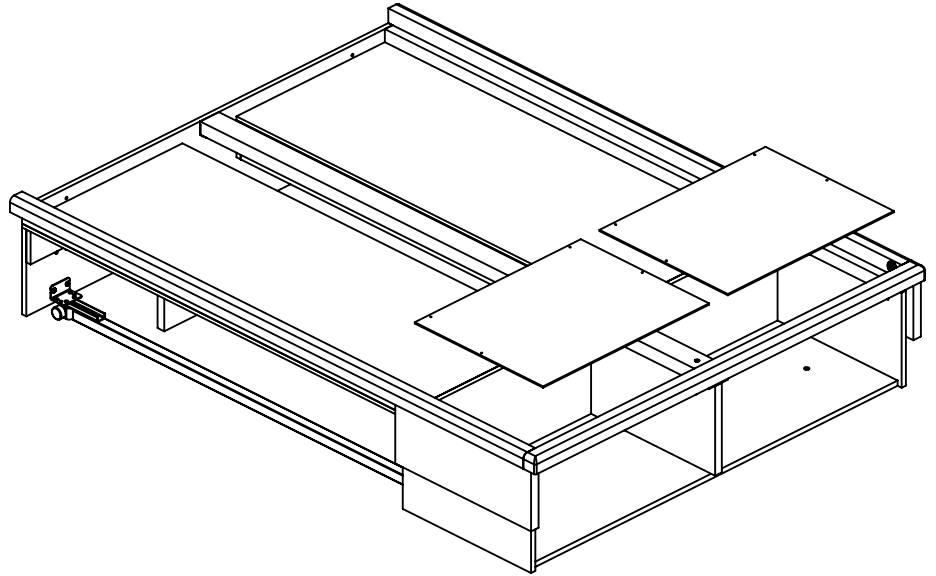

20. Lay the slats in position on the wooden bearers and fix using 6 woodscrews for each set.

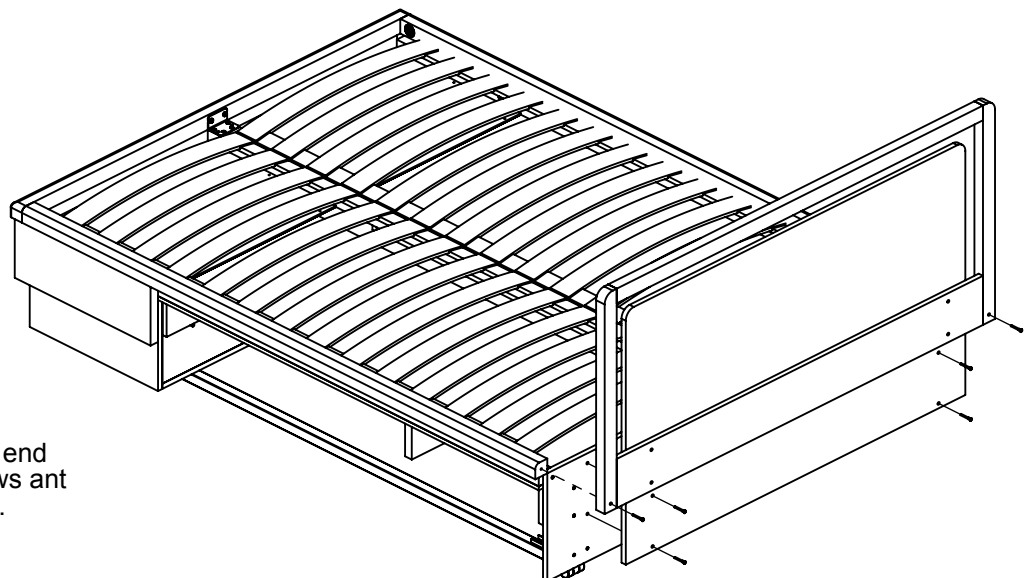


21. Attach the headboard to the head end panel using four long connecting screws and two long euroscrews into the side rails.

22. At the foot end the drawers can be inserted into the carcass in their relevant positions.

23. Assemble the side drawers and slide into position in the side carcass. (see separate instructions)

24. Assemble the bedside drawer and lift up table if required and slide into position in the side carcass. (see separate instructions)

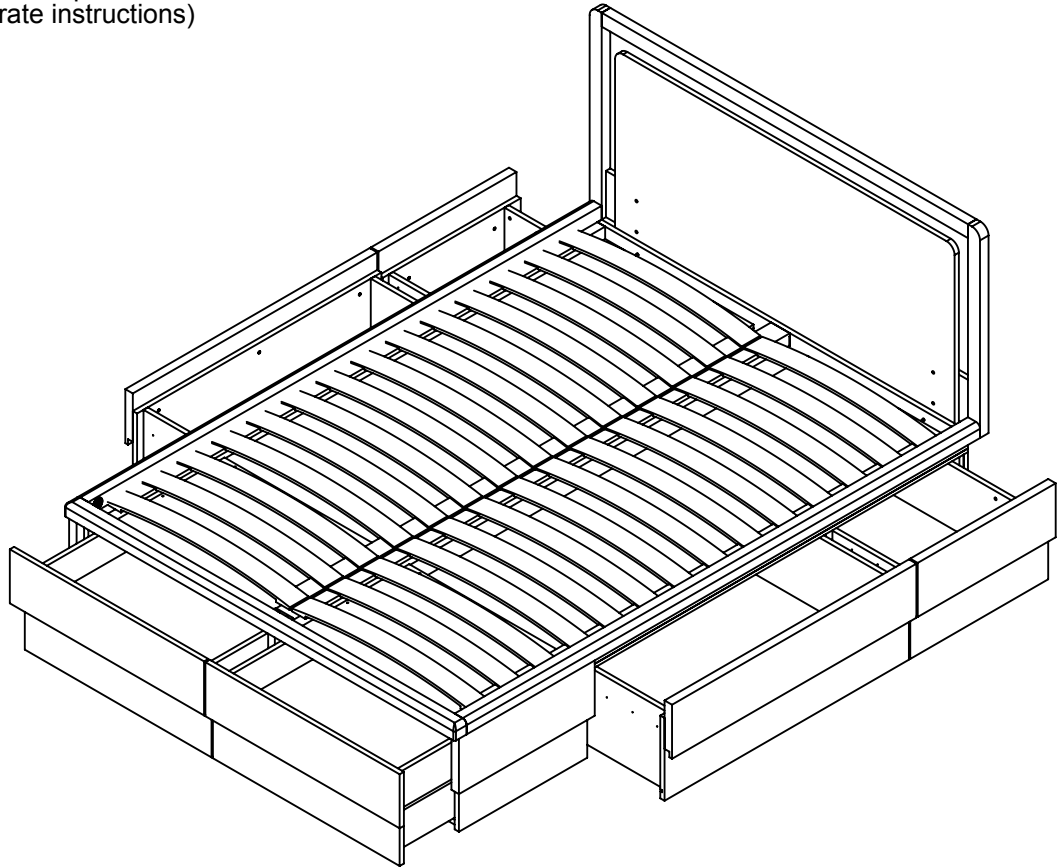

## Dismantling the Boxer Storage bed

1. Remove the mattress and empty the contents of the drawers

2. Dismantle the bed in the reverse order of the above assembly procedure.